

# Samsung GALAXY MEGA™

## User Guide



# Table of Contents

---

Get Started.....	11
Your Phone at a Glance .....	11
Set Up Your Phone.....	11
Turn the Phone On.....	14
Activate Your Phone .....	15
Complete the Setup Screens.....	16
Set Up Voicemail .....	18
Sprint Account Information and Help .....	18
Sprint Account Passwords .....	18
Manage Your Account.....	19
Sprint Support Services.....	20
Phone Basics .....	21
Your Phone's Layout .....	21
Key Functions.....	21
Turn Your Phone On and Off.....	23
Turn Your Screen On and Off.....	23
Touchscreen Navigation .....	24
Your Home Screen .....	29
Home Screen Overview .....	29
Customize the Home Screen .....	30
Extended Home Screens .....	31
Recent Apps.....	32
Wallpapers .....	32
Notification Panel.....	33
Quick Settings .....	34
Multi Window .....	35
Activate or Deactivate Multi Window .....	36
Using Multi Window.....	36
Hide Multi Window.....	37
Relocate the Apps Tray and Tab.....	37

Customizing the Multi Window Apps .....	38
Status Bar .....	39
Features.....	41
Air View .....	41
Assistant Menu .....	41
Motions and Gestures .....	43
Screen Capture .....	44
Smart Screen .....	44
Voice Control.....	45
Enter Text .....	45
Touchscreen Keyboards .....	45
Text Input Methods.....	45
Select a Default Text Input Method .....	46
Google Voice Typing .....	46
Samsung Keyboard.....	47
Swype.....	48
Editing Text .....	49
Phone Calls.....	51
Make Phone Calls.....	51
Call Using the Phone Dialer .....	51
Call from Call Logs .....	51
Call from Contacts.....	52
Call Using a Speed Dial Number.....	52
Call a Number in a Text Message or Email Message .....	52
Call Emergency Numbers .....	53
Receive Phone Calls .....	53
Voicemail .....	54
Voicemail Setup .....	54
Voicemail Notification .....	54
Retrieve Your Voicemail Messages .....	55
Visual Voicemail .....	56
Phone Call Options.....	57
In-Call Options.....	57

Caller ID .....	58
Call Waiting .....	58
Conference Calling .....	59
Call Forwarding .....	60
Speed Dialing .....	61
Call Logs.....	62
Call Settings.....	63
Contacts.....	64
Get Started with Contacts.....	64
Access Contacts .....	64
Add a Contact.....	64
Edit a Contact .....	65
Add or Edit Information for a Contact .....	65
Assign a Picture to a Contact .....	65
Link a Contact .....	66
Delete a Contact.....	66
Add Contacts to Your Favorites.....	66
Share a Contact.....	67
Create Groups .....	67
Create a New Group .....	67
Add a Contact to a Group.....	67
Send an Email to Group Members .....	68
Accounts and Messaging.....	69
Google Account .....	69
Create a Google Account .....	69
Gmail .....	69
Send a Gmail Message .....	70
Read and Reply to Gmail Messages.....	70
Email.....	71
Add an Email Account.....	71
Add a Microsoft Exchange ActiveSync Account.....	71
Compose and Send Email.....	72
View and Reply to Email .....	72

Manage Your Email Inbox .....	73
Text and Multimedia Messaging .....	74
Send a Message .....	74
New Messages Notification .....	75
Managing Messages .....	75
Messaging Settings .....	76
Social Networking Accounts .....	78
Flipboard .....	78
Messenger.....	79
Google+.....	79
Hangouts .....	79
YouTube .....	80
Apps and Entertainment .....	81
Google Play Store.....	81
Find and Install an App.....	81
Create a Google Wallet Account .....	82
Open an Installed App.....	82
Uninstall an App .....	82
Google Play Books .....	82
Google Play Magazines.....	82
Google Play Movies & TV.....	83
Group Play.....	83
Music .....	84
Google Play Music .....	84
Music (App) .....	84
Google Maps .....	86
Navigation.....	86
Local .....	86
Samsung Link .....	86
Use Samsung Link to Share Media with Another Device .....	87
Story Album .....	87
TripAdvisor.....	88
WatchON .....	88

Web and Data .....	89
Internet .....	89
Chrome .....	89
Lumen Toolbar .....	89
Data Services (3G and 4G) .....	89
Your Data Services User Name .....	90
4G Services .....	90
Wi-Fi .....	91
Turn Wi-Fi On and Connect to a Wireless Network .....	91
Wi-Fi Settings .....	92
Wi-Fi Direct .....	92
Bluetooth .....	93
Turn Bluetooth On or Off .....	93
Connect a Bluetooth Headset or Car Kit .....	93
Reconnect a Headset or Car Kit .....	94
Disconnect or Unpair from a Bluetooth Device .....	94
Bluetooth Settings .....	95
Virtual Private Networks (VPN) .....	95
Prepare Your Phone for VPN Connection .....	95
Add a VPN .....	96
Connect to a VPN .....	96
Memory Card .....	96
Install a Memory Card .....	96
Remove a Memory Card .....	97
View Available Memory on microSD Card .....	98
Format a Memory Card .....	98
Unmount a microSD Card .....	98
Transfer Files Between Your Phone and a Computer .....	98
Kies via Wi-Fi .....	98
Transfer Files Using a USB Cable .....	99
Camera and Video .....	100
Take Pictures .....	100
Record Videos .....	101

Camera Modes .....	102
Camera Settings.....	103
Gallery .....	104
View Photos and Videos .....	105
Zoom In or Out on a Photo .....	106
Working with Photos.....	107
Share Photos and Videos.....	108
Video Player .....	108
Tools and Calendar.....	109
Calculator.....	109
Calendar .....	109
Add an Event to the Calendar .....	109
View Events.....	110
Erase Events .....	110
Clock.....	111
Alarm .....	111
Downloads .....	111
Dropbox .....	112
Google Search.....	112
Google Settings .....	112
Help .....	112
S Memo .....	112
My Files .....	112
Samsung Apps .....	113
S Translator .....	113
S Voice .....	113
Voice Search .....	113
Settings.....	114
Accessing Settings .....	114
Settings Tabs.....	114
Wi-Fi Settings .....	115
Hotspot .....	116
Bluetooth Settings.....	116

Data Usage Settings.....	117
More Networks.....	118
Airplane Mode .....	118
Mobile Networks .....	118
Tethering .....	118
VPN .....	119
Roaming .....	119
NFC .....	119
Turn NFC On or Off.....	119
Android Beam.....	120
S Beam .....	120
Turn S Beam On or Off .....	120
Nearby Devices .....	120
Screen Mirroring .....	121
Kies via Wi-Fi.....	121
Lock Screen.....	121
Swipe.....	122
Face Unlock .....	122
Face and Voice .....	122
Pattern.....	123
PIN .....	123
Password.....	123
None .....	123
Display Settings .....	124
Wallpaper .....	124
Notification Panel .....	124
Multi Window .....	124
Screen Mode .....	125
Brightness .....	125
Auto Rotate Screen .....	125
Screen Timeout .....	125
Daydream.....	126
Font Style .....	126



Font Size .....	126
Increase Legibility.....	126
Touch Key Light Duration .....	127
Show Battery Percentage.....	127
Edit After Screen Capture .....	127
LED Indicator .....	127
Sound .....	128
Volume .....	128
Vibration Intensity .....	128
Ringtones .....	128
Vibrations .....	129
Default Notification Sound.....	129
Vibrate When Ringing .....	129
Dialing Keypad Tone .....	129
Touch Sounds .....	129
Screen Lock Sound.....	129
Haptic Feedback .....	130
Emergency Tone .....	130
Adapt Sound.....	130
Home Screen Mode.....	130
Call Settings.....	131
Set Up Call Rejection Messages .....	131
Answering/Ending Calls .....	131
Turn Off Screen During Calls .....	131
Call Alerts .....	132
Call Accessories.....	132
Ringtones and Keypad Tones .....	133
Personalize Call Sound .....	133
Noise Reduction .....	133
Increase Volume in Pocket.....	133
US Dialing .....	134
International Dialing.....	134
TTY Mode.....	134

Hearing Aids .....	134
DTMF Tones .....	134
Voicemail Settings .....	135
Voice Privacy .....	135
Blocking Mode .....	135
Driving Mode .....	136
Power Saving Mode .....	136
Power Saving Tips .....	136
Accessory Settings .....	137
Accessibility .....	137
One-Handed Operation .....	139
Language and Input Settings .....	140
Choose a Default Language .....	140
Default Input Method .....	140
Google Voice Typing .....	140
Samsung Keyboard .....	141
Swype Settings .....	142
Voice Search Settings .....	143
Text-To-Speech Options .....	144
Pointer Speed .....	144
Motions and Gestures .....	144
Smart Screen .....	145
Smart Stay .....	145
Air View .....	146
Voice Control .....	146
Accounts Settings .....	147
Add an Account .....	147
Cloud .....	147
Back Up and Reset Settings .....	147
Location Services .....	148
Security Settings .....	148
Encryption .....	149
Make Passwords Visible .....	149

Device Administration.....	149
Credential Storage .....	150
Application Manager .....	151
Battery .....	151
Storage .....	151
Date and Time .....	152
Activate This Device .....	152
System Update .....	152
About Device .....	153
Copyright Information.....	154
Index .....	155

# Get Started

The following topics give you all the information you need to set up your phone the first time.

## Your Phone at a Glance

The following illustration outlines your phone's primary external features and buttons.



## Set Up Your Phone

Prior to using the phone, it is necessary to install and charge the battery. An optional microSD memory card (not included) can also be installed at this time.

### Remove the Back Cover

 
1. Remove the back cover by placing your fingernail or a pointed object into the slot in the side of the cover (1).



2. Pull the cover up and then lift up and away from the phone (2).

### Install the Memory Card

- To insert an optional microSD card (not included), carefully slide the memory card under the **top** metal plate into the microSD card socket until the card locks into place. For more information, see [Memory Card](#).

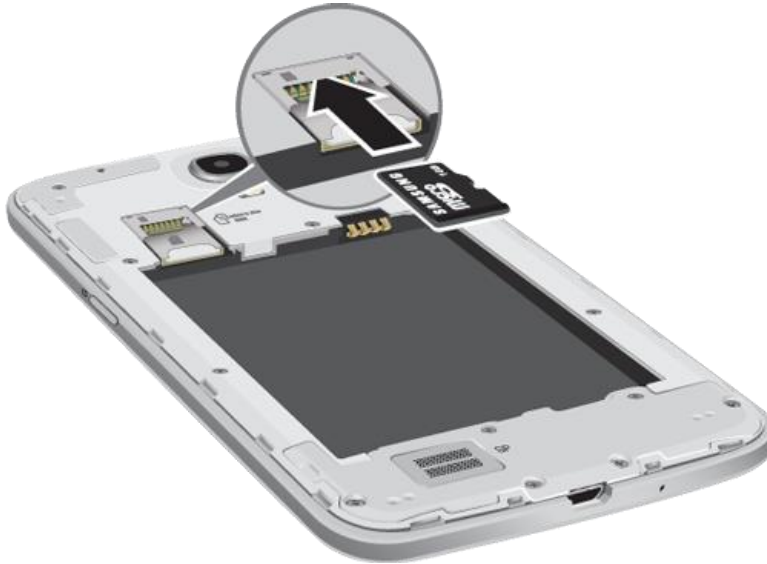

### Install the Battery

1. Insert the battery into the battery compartment, making sure that the connectors align (1).



2. Gently press down to secure the battery (2).

## Replace the Back Cover

1. Place the battery cover onto the back of the phone and press down.



2. Press along the edge of the back cover until you have a secure seal.

## Charge the Battery

Your phone is powered by a rechargeable, standard Li-Ion battery. A Wall/USB Charger (Charging Head and USB cable) is included with the phone for charging the battery. You will need to charge the battery before using your phone.

**Warning!** Use only approved accessories to charge your phone. Approved accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.

 
1. Plug the USB cable into the charger/accessory jack on the bottom of the phone.
2. Plug the USB cable into the charging head, and then plug the charging head into an electrical outlet.




3. When charging is finished, remove the USB cable from the charger/accessory jack on the phone.

## *Turn the Phone On*

Use the Power/Lock Key to turn the phone on.

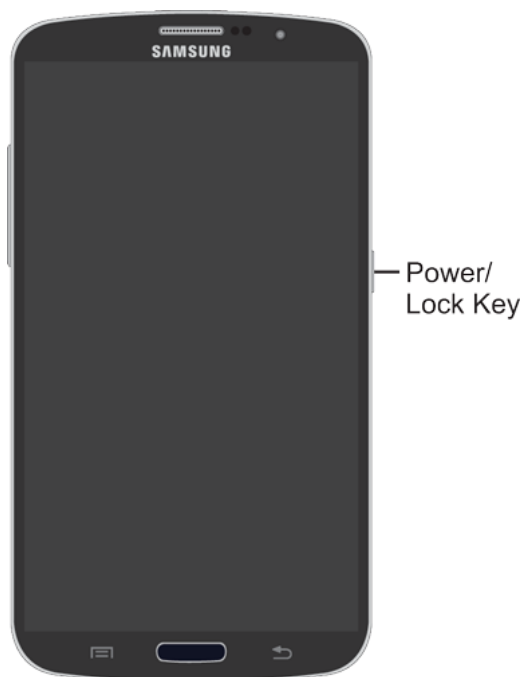

- Press and hold the **Power/Lock Key**  to turn the phone on.
  - If your phone is activated, it will turn on, search for Sprint service, and begin the setup application.
  - If your phone is not yet activated, see [Activate Your Phone](#) for more information.

# Activate Your Phone

Follow the instructions below to activate your phone if it has not already been activated. Depending on your account or how and where you purchased your phone, it may be ready to use or you may need to activate it on your Sprint account.

- If you purchased your phone at a Sprint Store, it is probably activated and ready to use.
- If you received your phone in the mail and it is for a new Sprint account or a new line of service, it is designed to activate automatically.
  - When you turn the phone on for the first time, you should see a **Hands Free Activation** screen, which may be followed by a **PRL Update** screen and a **Firmware Update** screen. Follow the onscreen instructions to continue.
- If you received your phone in the mail and you are activating a new phone for an existing number on your account (you're swapping phones), you can activate on your computer online or directly on your phone.
  - **Activate on your computer:**
    - Go to [sprint.com/activate](http://sprint.com/activate) and complete the online instructions to activate your phone.
  - **Activate on your phone:**
    - Turn on your new phone. (Make sure the old one is turned off.) Your phone will automatically attempt Hands-Free Activation.
    - Touch **Activate** to override auto-activation and start the manual activation wizard.
    - Follow the on-screen prompts to complete the activation process.

To confirm activation, make a phone call. If your phone is still not activated, visit [sprint.com/support](http://sprint.com/support) for assistance. If you do not have access to the Internet, call Sprint Customer Service at **1-888-211-4727** from another phone.

**Tip:** Do not press the **Power** button while the phone is being activated. Pressing the **Power** button cancels the activation process.


**Note:** If you are having any difficulty with activation, visit [sprint.com/support](http://sprint.com/support).




## Complete the Setup Screens

The setup screens help you set up certain features and preferences on your phone. Once your phone has been turned on, you will see a Welcome message. You can then complete the setup process.

**Note:** You may be able to complete the setup screens before your phone has been activated on your Sprint account.

**Note:** During or after setup, you may see a **Connections Optimizer** notice. Read the notice and touch **I Agree** to allow your phone to connect automatically to the best available data network, including Wi-Fi. To turn Connections Optimizer off at any time, touch  > **Settings** > **Connections** tab > **More networks** > **Mobile networks** > **Connections optimizer** and uncheck the box.

1. From the Welcome screen, select a language (if prompted) and touch **Next** to get started.
  - To skip any section, touch **Next** or **Skip**.
  - To go back to the previous screen, press the  **Back Key**.



**Note:** On the Welcome screen, there is also an **Accessibility** button. If you are visually impaired or hard of hearing, touch **Accessibility** to change the accessibility settings. For more information, see [Accessibility Settings](#).

2. Follow the onscreen instructions to complete each section. For each topic, you will have the option to skip it and continue to the next screen.
  - **Wi-Fi:** If prompted, follow the prompts to sign in to an available Wi-Fi network. For secured Wi-Fi networks, you will need to enter a password. See [Wi-Fi](#) for more details.
  - **Samsung Account:** Touch **Sign in** to sign in to your current Samsung Account, or touch **Create new account** and follow the instructions to set up a new Samsung Account.
    - Touch **variety of services** to learn more using your Samsung Account.
  - **Got Google?:** Touch **Yes** to sign in to your current Google Account, or touch **No** and follow the instructions to set up a new Google Account.

- **Make it Google:** Touch **Get an account** and follow the instructions to create a new Google Account, or touch **Not now**.
    - Touch ⓘ to learn about Google Accounts.
    - This screen only displays if you did not previously sign in to your Google Account.
  - **Entertainment:** Touch **Set up credit card** and follow the instructions to enter credit card information for your Google Play account, or touch **Not now**.
    - This screen only displays if you previously signed in to your Google Account.
  - **Backup and Restore:** Read the backup and restore information. Then enable either or both options.
    - This screen only displays if you previously signed in to your Google Account.
  - **Google & Location:** Read the information about location services. Then enable either or both location services.
  - **This phone belongs to...** — Enter your first and last name. This information is used by the phone to personalize certain apps.
    - This screen only displays if you did not previously sign in to your Google Account.
  - **Dropbox Account** — Touch **Create account** and follow the instructions to set up a new Dropbox Account, or touch **Sign in** to sign into your Drop Box Account.
  - **Learn about key features:** Touch each feature to see more details. Touch **OFF/ON** to enable/disable each feature.
  - **Phone name:** Enter your name or a phone name. This name is used to identify the phone when using Bluetooth, Wi-Fi Direct, etc.
3. Touch **Finish**. Your setup is now complete.

## Set Up Voicemail

You should set up your voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

1. Touch  > **Phone** > **Keypad** tab. (If your screen is locked, press the **Power Key** to turn on the display and then swipe the screen to unlock it.)
2. Touch and hold  to dial your voicemail number.
3. Follow the system prompts to:
  - Create your password.
  - Record your name announcement.
  - Record your greeting.

**Important: Voicemail Password**—It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

For more information, see [Voicemail](#).

## Sprint Account Information and Help

Find out about account passwords and information about managing your account and finding help.

### Sprint Account Passwords

You will need to create passwords to protect access to your personal account information, your voicemail account, and your data services account. As a Sprint customer, you enjoy unlimited access to all your information.

#### Account User Name and Password

If you are the account owner, you will create an account user name and password when you sign on to [sprint.com/mysprint](http://sprint.com/mysprint). (Click **Sign in/Register** and then click **Sign up now!** to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at [sprint.com/mysprint](http://sprint.com/mysprint).

#### Voicemail Password

You will create your voicemail password when you set up your voicemail. See [Set Up Voicemail](#) for more information on your voicemail password.

## Data Services Password

With your Sprint phone, you may elect to set up an optional data services password to control access and authorize purchases.

For more information, or to change your passwords, sign on to [sprint.com/mysprint](https://sprint.com/mysprint).











## Manage Your Account

Manage your Sprint account from your computer, your Sprint phone, or any other phone.

Online: [sprint.com/mysprint](https://sprint.com/mysprint)

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint phones.
- View available Sprint service plans and options.
- Learn more about data services and other products like games, ringtones, screen savers, and more.

## From Your Sprint Phone

1. Touch  > **Phone > Keypad** tab.
2. Do any of the following:
  - Touch    to check minute usage and account balance.
  - Touch    to make a payment.
  - Touch    to access a summary of your Sprint service plan or get answers to other questions.

## Sprint Support Services

Sprint 411 and Sprint Operator Services let you easily access information and calling assistance from your Sprint phone.

### Sprint 411

Sprint 411 gives you access to a variety of services and information, including residential, business, and government listings; movie listings or show times; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

- Touch  >  **Phone** > **Keypad** tab, and then touch    .

### Sprint Operator Services

Sprint Operator Services provides assistance when you place collect calls or when you place calls billed to a local telephone calling card or third party.

- Touch  >  **Phone** > **Keypad** tab, and then touch  .

For more information or to see the latest in products and services, visit us online at [sprint.com/mysprint](http://sprint.com/mysprint).

# Phone Basics

---

Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. The following topics will introduce the basic functions and features of your phone.

## Your Phone's Layout

The following illustration outline your phone's basic layout.



## Key Functions

The following list defines the features listed in the above illustrations.

- **LED indicator** displays red when charging, green when fully charged, blue when powering up, and orange when a notification has arrived.
- **Earpiece** lets you hear the caller and automated prompts during calls.
- **Proximity and Light Sensors** detect the presence of objects near the phone, such as when using motion settings. For example, while talking on the phone, the sensor detects when it's near your ear and turns off the screen to prevent accidental key presses.
- **Power/Lock Key** lets you turn the phone on or off, turn the screen on or off, or lock the screen. Press and hold for a Device options menu. Options include Power off, Airplane mode, and Restart. You can also quickly switch to Mute, Vibrate, and Sound.
- **Back Key** lets you return to the previous screen, or close a dialog box, options menu, the Notification Panel, or onscreen keyboard.

- **Home Key** returns you to the Home screen. Press and hold to open the recently used applications window, and access Task Manager and Google Search.
- **Menu Key** allows you to access a menu from most of your phone's screens.
- **Volume Key** adjusts the volume of your phone's sounds. From the Home screen, press to adjust master volume. During calls or playback, press to adjust volume. Press to mute the ringtone of an incoming call.
- **Cover Slot** allows you to lift the cover from the back of your phone.
- **Infrared transmitter** allows you to control other phones, such as a TV, in conjunction with apps like WatchON.
- **Camera** lets you take pictures and record videos.
- **Flash** helps illuminate subjects in low-light environments when the camera is focusing and capturing a photo or video.
- **Microphones** allow callers to hear you when you are using the speakerphone, as well as capture sound during recording.
- **3.5 mm Headset Jack** allows you to plug in either a stereo headset or an optional headset for convenient, hands-free conversations.
- **Speaker** plays ringtones and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.
- **USB Charger/Accessory Port** allows you to connect the phone charger/USB cable (included) and other optional accessories (not included).

**CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.


## Turn Your Phone On and Off

The instructions below explain how to turn your phone on and off.

### Turn Your Phone On

- Press and hold the  ① **Power/Lock Key**.

### Turn Your Phone Off

1. Press and hold the  ① **Power/Lock Key** to open the Device options menu.
2. Touch **Power off** to turn the phone off. Your screen remains blank while your phone is off (unless the battery is charging).

## Turn Your Screen On and Off

Your phone allows you to quickly turn the screen off when not in use and to turn it back on and unlock it when you need it.


### Turn the Screen Off When Not in Use

- To quickly turn the screen off, press the  ① **Power/Lock Key**.

To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone's screen is off.

**Note:** For information on how to adjust the time before the screen turns off, see [Screen Timeout](#).

### Turn the Screen On and Unlock It

1. To turn the screen on, press the **Power/Lock Key**  ①.
2. Swipe the screen in any direction to unlock the screen.
  - If you have set up a screen lock, you will be prompted to draw the pattern or enter the password or PIN. For more information, see [Lock Screen](#).



# Touchscreen Navigation

Your phone's touchscreen lets you control actions through a variety of touch gestures.

## Touch

When you want to type using the on-screen keyboard, select items on-screen such as application and settings icons, or press on-screen buttons, simply touch them with your finger.



## Touch and Hold

To open the available options for an item (for example, a contact or link in a Web page), touch and hold the item.



## Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.



## Drag

To drag, touch and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.



## Flick



Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quick strokes. This finger gesture is always in a vertical direction, such as when flicking the contacts or message list.



## Rotate

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways. When entering text, you can turn the phone sideways to bring up a bigger keyboard. See [Touchscreen Keyboards](#) for more details.



**Note:** Screen rotation needs to be enabled for the screen orientation to automatically change. Touch  >  > **Settings** > **My Device** tab > **Display** > **Auto rotate screen**.

**Tip:** You can also access the screen rotation setting from the Notifications screen. Pull down the Notifications bar and touch **Screen rotation** to enable the option.

## Pinch and Spread

"Pinch" the screen using your thumb and forefinger to zoom out or "spread" the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)



**Tip:** Pinching any Home screen will let you see thumbnails of all five Home screens. Touch a thumbnail to go straight to another Home screen.

# Your Home Screen

The Home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application shortcuts, folders, widgets, and more.

## Home Screen Overview

Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.



- **Status Bar:** Displays phone service and connection information on the right side and notification alerts on the left. For more information, see [Status Bar](#).
- **Status Icons:** Indicate the status of your phone.
- **Widgets:** Applications that run on the Home screens.
- **Current Screen:** Indicates which Home screen is being displayed. For more information, see [Extended Home Screens](#).
- **Apps:** Displays the Apps screen.
- **Primary Shortcuts:** Shortcuts to common features. Primary Shortcuts appear on every Home screen.

- **Apps Shortcuts:** Shortcuts to common applications.
- **Notification Icons:** Display notifications, such as new email, new messages, software updates, etc.

**Note:** Your phone's Home screens cycle through so that you can keep swiping in one direction and make it back to the main Home screen. The small squares above the Primary shortcuts indicate the Home screen being displayed.

**Tip:** Touch  to return to the main Home screen from any other screen.

## *Customize the Home Screen*

Learn how to add, move, or remove items from the home screen.


### Add Items to the Home Screen

1. Touch and hold an empty area on a home screen. (If the current home screen doesn't have room, swipe the screen left or right to display an extended screen.)
2. On the Home screen menu, touch the type of item you want to add and then select the item.
  - **Set wallpaper:** Select a wallpaper for the **Home screen**, the **Lock screen**, or the **Home and lock screens**.
  - **Apps and widgets:** Add app shortcuts to a home screen, or add widgets such as a clock, calendar, mail, people, social networking apps, and more.
  - **Folder:** Add a folder where you can organize screen items. Add a shortcut to all your contacts, contacts with phone numbers, or starred contacts. Contact details are automatically updated when there are changes in the source.
  - **Page:** Add a new blank home page, up to a maximum number of seven.


### Move or Remove Items on the Home Screen

- Touch and hold the item you want to move or remove from the home screen.
  - To move the item, drag it to a new area and release it.
  - To remove the item, drag it to the **Remove** icon at the top of the screen and release it.

## Extended Home Screens

 
In addition to the main home screen, your phone has six extended home screens to provide more space for adding icons, widgets, and more. Touch  and then swipe across the screen to move from the main screen to an extended screen.

There are up to six extended screens available in addition to the main Home screen.

- If you are not already using the maximum number of screens for your phone, you can add more screens by touching and holding an empty space on a home screen and then touching **Page**.
- While on an extended screen, touch  to return to the main home screen.

## Go Directly to a Particular Screen


1. From any screen, pinch the screen to display thumbnail images of all screens.
2. Touch the screen you want to open.

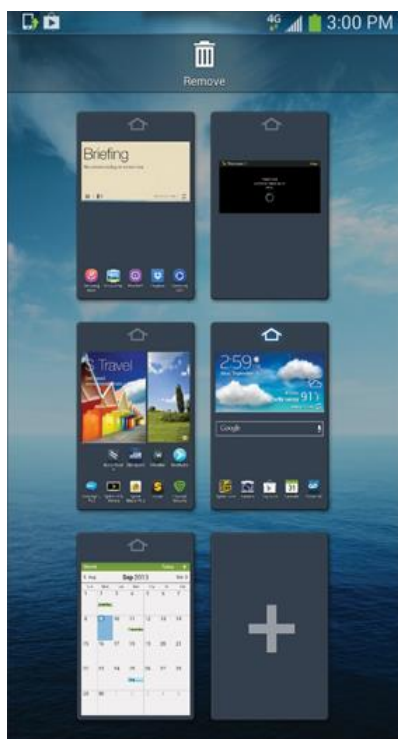





## Recent Apps

Quickly navigate between currently running apps by viewing thumbnails of recently used apps.

1. Press and hold  from any screen to display **Recent apps**.
2. Touch an thumbnail to return to the app.


## Wallpapers

You can choose a picture to display on the Home Screen, Lock screen, or on both the Home and Lock screens. Choose from preloaded wallpaper images or select a photo you have downloaded or taken with the Camera.

1. From any Home screen, touch and hold on an empty area of the screen. The *Home screen* menu displays.  
  
— or —  
  
press , and then touch  > **Settings** > **My device** tab > **Display** > **Wallpaper**.
2. Touch **Set wallpaper**.
3. Touch **Home screen**, **Lock screen**, or **Home and lock screens**.
4. Choose a source for wallpaper:
  - **Gallery**: Choose a picture from Gallery. Follow the prompts to crop the picture and save it as wallpaper.
  - **Live wallpapers**: Choose a moving scene for the background (Home screen only).
  - **Travel wallpaper**: Display recommended destinations on your Lock screen (Lock screen only).
  - **Wallpapers**: Choose an image from the Wallpapers gallery.

# Notification Panel

 The Notification Panel displays information about connections, alerts, new messages, and more. It also has Quick settings—buttons which allow you to quickly access and change common system settings.

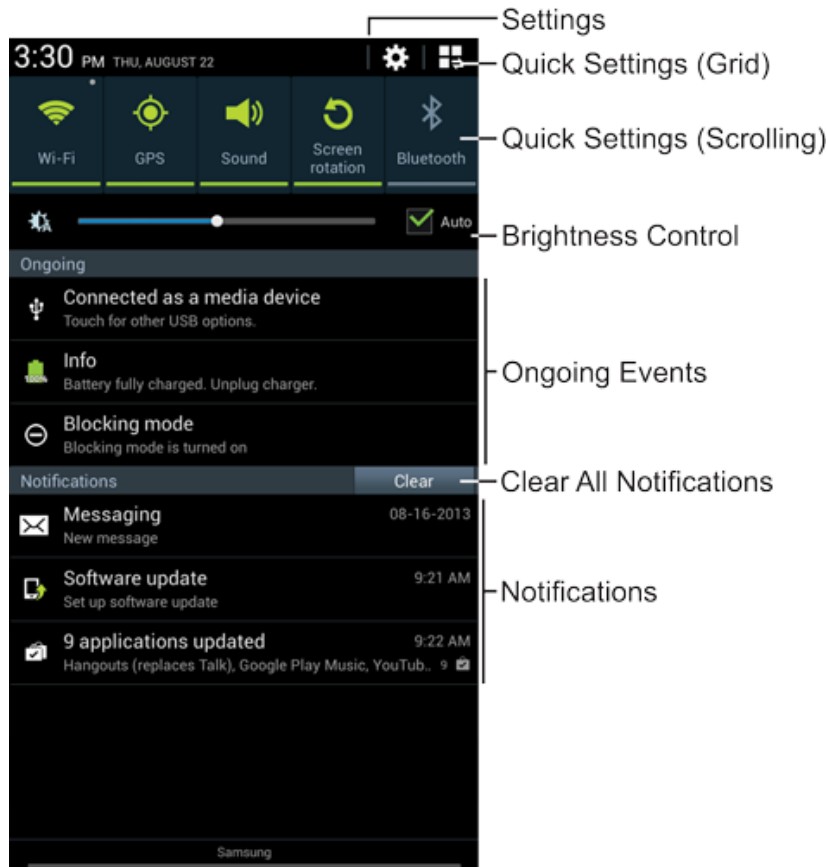

- **Settings:** Access System settings. For more information, see [Settings](#).
- **Quick Settings (Grid):** Display Quick setting buttons in a grid.
- **Quick Settings (Scrolling):** Display Quick setting buttons in a scrollable list.
- **Brightness Control:** Adjust the brightness of the display.
- **Ongoing Events:** Display ongoing events, such as USB connections.
- **Clear All Notifications:** Remove all notifications.
- **Notifications:** Display notifications, such as new email and software updates.

## Access the Notifications Panel


1. Touch and slide downward from the top of the screen to display the Notification Panel. Slide the Notification Panel upward to close it.
2. Touch **Ongoing** events or Notifications to view details, or to launch the related app or feature.

## Clearing Notifications



- Touch and slide an item left or right to clear it.  
— or —
- Touch **Clear** to remove all notifications.

## Quick Settings

Quickly enable/disable common system settings for your phone.

1. Touch and slide downward from the top of the screen to display the Notification Panel.
2. To view all Quick setting buttons, touch , or slide the Quick setting buttons to the left.
3. Touch a Quick setting button to enable (green) or disable (grey):
  - **Wi-Fi**: Enable Wi-Fi connections. For more information, see [Wi-Fi](#).
  - **GPS**: Enable or disable GPS services. For more information, see [Location Services](#).
  - **Sound/Vibrate/Mute**: Mute system sounds.
  - **Screen rotation**: Automatically rotate the screen from landscape to portrait and vice versa when the phone is tilted.
  - **Bluetooth**: Activate Bluetooth. For more information, see [Bluetooth](#).
  - **Blocking mode**: Disable notifications for selected features. For more information, see [Blocking Mode](#).
  - **Power saving**: Activate Power saving mode. For more information, see [Power Saving Mode](#).
  - **Multi window**: Enable the Multi window feature. For more information, see [Multi Window](#).
  - **Screen Mirroring**: Share your phone's screen with another device, using an optional AllShare Cast accessory (not included). For more information, see [Screen Mirroring](#).
  - **S Beam**: Send or receive data by touching your phone to another NFC-capable device. For more information, see [S Beam](#).

 
- **NFC:** Enable NFC (Near Field Communication) to share information between your phone and another NFC device by touching the devices together, typically back-to-back. For more information, see [NFC](#).
- **Air view:** Enable the Air view feature. For more information, see [Air View](#).
- **Driving mode:** Read new notifications aloud. For more information, see [Driving Mode](#).
- **Smart stay:** Set the screen to stay on as long as you are looking at it. For more information, see [Smart Stay](#).
- **Sync:** Synchronize contacts, email, etc. with the network.
- **Airplane mode:** Disable all wireless connections. For more information, see [Airplane Mode](#).

To customize Quick Settings, press , and then touch  > **Settings** > **My device** tab > **Display** > **Notification Panel**. For more information, see [Notification Panel](#).

## Multi Window

Multi Window allows you to use two apps on the same screen, in separate, resizable windows.

**Note:** Only applications found within the Apps tray can be active atop another current application on the screen. When launching applications that contain multimedia files (music or video), audio from both files will be played simultaneously.

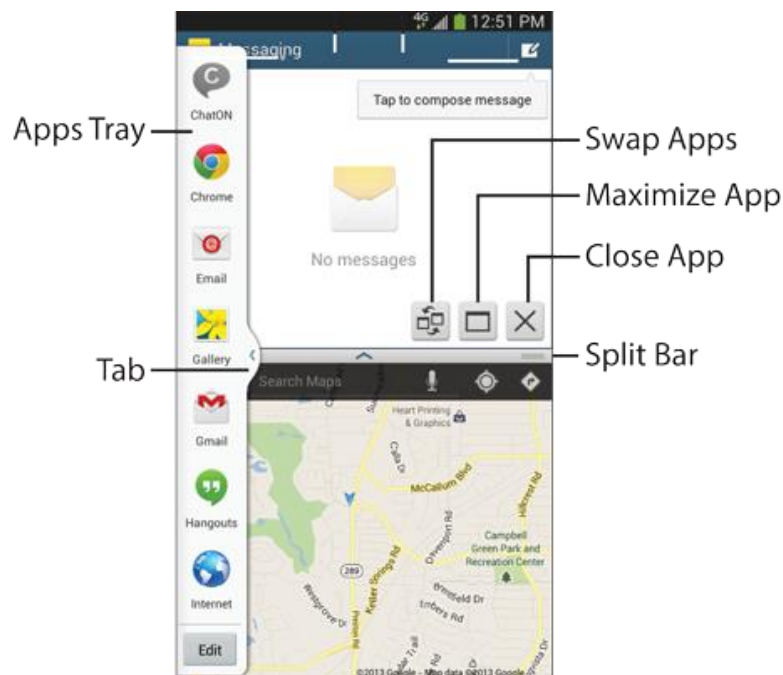




## Multi Window Features

- **Apps Tray:** Contains customizable list of apps which can be used with the Multi window feature. Touch and slide the list up and down to display more apps.
- **Tab:** Open and close the Apps Tray. The tab may be relocated anywhere along the Apps Tray edge, or hidden from view.
- **Swap Apps:** Swap the two apps position.
- **Maximize App:** Maximize the selected app.
- **Close App:** Close the selected app.
- **Split Bar:** Movable border between the two apps' windows.

## Activate or Deactivate Multi Window

Enable Multi window in the Display settings.

1. Press  and touch  **Apps** >  **Settings** > **My device** tab > **Display**.
2. Touch the check box next to **Multi window** to activate/deactivate the feature.
3. Touch the Tab to open the Apps tray showing all the available Multi window apps.

**Note:** When initially activated, the entire Apps tray displays, then minimizes to only show the tab.

## Using Multi Window

Any of the apps found within the Multi window panel can run at the same time as another Multi window app.

**Note:** Only apps found within the Multi window panel can be active atop another running app. When launching applications that contain multimedia files (music/video), audio from both files will be played simultaneously.


## Run Two Apps Together

1. Activate the Multi window and start an app.
2. Touch the **Tab** to display the Apps tray.
3. Touch and hold an app icon until it detaches from the panel, then drag it off the Apps tray. Release it over the top area of the screen.
4. Touch and hold a second app icon until it detaches from the panel, then drag it off the Apps tray. Release it over the bottom area of the screen.


## Adjust the Size of Apps in Multi Window

- With two apps running, touch and drag the **Split bar** up and down to resize the two windows.


## Switch the Placement of the Two Apps

1. Touch the **Split bar** to display the Swap, Maximize, and Close icons.
2. Touch  **Swap**. The two apps swap places.

## Maximize an App



1. Touch the **Split bar** to display the Swap, Maximize, and Close icons.
2. Touch  **Maximize**. The selected app reverts to its normal (maximized) state.

## Close an App

1. Touch the **Split bar** to display the Swap, Maximize, and Close icons.
2. Touch  **Close**. The selected app closes.

## Hide Multi Window

The Multi window tab can be hidden from view.

1. Press and hold . This action hides the Multi window tab from view.
2. To redisplay Multi window, press and hold .

**Note:** The  **Back Key** does not activate or deactivate Multi window—It simply hides the tab from view.

## Relocate the Apps Tray and Tab

The Multi window is made up of two components—the **Apps tray** and the **Tab**. The Apps tray can be relocated to the left or right edge of the screen. The Tab can be moved up or down edge of the Apps tray.

### Relocate the Apps Tray

1. Activate the Multi window.
2. Touch and hold the **Tab** for approximately one-second.
3. Slowly drag the **Tab** to the left or right edge of the screen and release.

## Move the Tab

1. Activate the Multi window.
2. With the Apps tray closed, touch and hold the **Tab** for approximately one-second.
3. Slowly drag the **Tab** along the edge of the screen and release.

**Note:** This is a quick way to get the Tab out of the way if you cannot get to a button or option behind it.

## *Customizing the Multi Window Apps*

The apps on the Apps tray can be organized by either being rearranged or removed.

### Rearrange the Multi Window Apps

1. Activate the Multi window.
2. Touch the **Tab** to display the Apps tray.
3. Touch and hold an app icon until it detaches from the Apps tray, then drag it to a new location within the Apps tray and release.













### Remove or Restore a Multi Window App

1. Activate the Multi window.
2. Touch the **Tab** to display the Apps tray.
3. Touch **Edit** to display a storage tray.
4. To remove an app, touch and hold an app icon until it detaches from the tray, then carefully drag it off the Apps tray and onto the storage area.
5. To add an app back to the Apps tray, touch and hold an app icon until it detaches from the storage tray, then drag it onto the Apps tray.

## Status Bar















The Status bar at the top of the Home screen provides phone and service status information on the right side and notification alerts on the left. To view notification alerts, touch and hold the Status bar and drag it down.

### Status Icons

Icon	Description	For More Information
	Bluetooth is on.	See <a href="#">Bluetooth</a> .
	Connected to another Bluetooth-enabled device.	See <a href="#">Bluetooth</a> .
	Wi-Fi is active.	See <a href="#">Wi-Fi</a> .
	Mute system sounds.	See <a href="#">Volume</a> .
	Vibrate when notifications occur (sounds muted).	See <a href="#">Vibrations</a> .
	Network is available (full signal).	
	3G (data service) is available.	See <a href="#">Data Services (3G and 4G)</a> .
	4G (data service) is available.	See <a href="#">4G Services</a> .
	Airplane Mode is active.	See <a href="#">Airplane Mode</a> .
	Battery is charging.	See <a href="#">Battery</a> .
	Battery is fully charged.	See <a href="#">Battery</a> .
	Smart Stay is enabled.	See <a href="#">Smart Stay</a> .



## Notification Icons




Icon	Status	For More Information
	System Alert: Check the Notification Panel for details.	
	Download in progress.	See <a href="#">Find and Install an App</a> .
	New email message has arrived.	See <a href="#">Email</a> .
	New Gmail message has arrived.	See <a href="#">Gmail</a> .
	GPS Active: Displays when GPS is active.	See <a href="#">Location Services</a> .
	Software Update: There may be a software update available for this phone.	
	Select Input Method: When the keyboard is being displayed, open the Notification Panel screen to select a new input method.	See <a href="#">Text Input Methods</a> .
	Wi-Fi Direct is active.	See <a href="#">Wi-Fi Direct</a> .
	A screenshot has been captured.	See <a href="#">Screen Capture</a> .
	Nearby devices is enabled.	See <a href="#">Nearby Devices</a> .
	Blocking Mode is enabled.	See <a href="#">Blocking Mode</a> .
	An event has occurred	See <a href="#">View Events</a> .
	The phone is connected to a computer using a USB cable.	
	Screen Mirroring is enabled.	See <a href="#">Screen Mirroring</a> .

# Features

Discover features for controlling and interacting with your phone.



## Air View

Preview information when you hover your finger over the screen. For example, you can hover your finger over a scheduled item in your calendar to see more details.



1. Press  and touch  > **Settings** > **My Device** tab.
2. Touch **OFF/ON** to enable Air view.
3. Touch **Air view** to set options:
  - **Information preview:** Display information previews, extended text, and enlarged images when you hover your finger over the screen.
  - **Progress preview:** Preview a scene or show elapsed time when you hover your finger over the progress bar while watching a video.
  - **Speed dial preview:** Display the contacts and their speed dial numbers when you hover your finger over them in your contacts list.
  - **Webpage magnifier:** Display magnified links on webpages when you hover your finger over them.
  - **Sound and haptic feedback:** Play a sound and feel vibration when you hover your finger over Air view items.
  - Touch  > **Air view help** for tips on using this feature.

## Assistant Menu

















Move quickly to frequently-visited places and actions using Assistant Menu. It is designed to assist users with reduced dexterity, as well as users who want to navigate the phone using one hand.

- **Assistant Menu**  always 'stays on top' of the Home screen or app.
- To reposition **Assistant Menu**, touch and drag  to another location on screen.



### Enable Assistant Menu

1. Press , and then touch  > **Settings** > **My Device** tab > **Accessibility**.
2. Touch **OFF/ON** to turn Accessibility Menu on.
3. Touch **Assistant Menu** to set options.

## Using Assistant Menu

1. Touch **Assistant Menu**  to display the menu buttons:
  -  **Menu:** Open the context-menu.
  -  **Open notifications:** Open the Notification Panel.
  -  **Home:** Return to the Home screen.
  -  **Back:** Return to the previous screen or undo the last action.
  -  **Set volume:** Set the system volume.
  -  **Lock screen:** Lock the phone.
  -  **Restart:** Restart the phone.
  -  **Power off:** Turn the phone off.
  -  **Open device options:** Open the *Device options* pop-up menu.
  -  **Capture screen:** Take a snapshot of the current screen.
  -  **Zoom:** Zoom in or out on the current screen (not all apps support this feature).
  -  **Settings:** Configure settings for Assistant Menu.
  -  **Brightness:** Adjust the screen brightness.
  -  **Rotate screen:** Rotate the current display to Portrait, Landscape with Home key to the left, or Landscape with Home key to the right.
  -  **Recent apps:** View the list of recently used apps.

2. Touch  >  **Settings** for options:

- Touch **Dominant hand** to optimize the Assistant Menu buttons for use on the left or right side of the screen.
- Touch **Edit** to rearrange or remove icons from Assistant Menu:
  - Touch and drag icons to rearrange them.
  - Touch  to remove an icon from Assistant Menu.
  - Touch  to add an icon back to Assistant Menu.


**Tip:** Touch  > **Reset** to revert back to the default settings.

## *Motions and Gestures*

Control your phone with natural movements, like putting the phone to your ear to call a contact displayed on the screen.



- **Motion:** Control your phone with natural movements, like putting the phone to your ear to call a displayed contact. Touch **OFF/ON** to turn Motion on, then touch **Motion** to set options:
  - **Direct call:** Lift the phone to your ear while viewing a contact to call the contact.
  - **Smart alert:** Lift the phone to receive notifications of missed calls and notifications that occurred while the phone was stationary.
  - **Zoom:** Tilt the phone to zoom in or out when viewing pictures in Gallery.
  - **Move an icon:** Move the phone left or right while touching an icon to reposition it to another page.
  - **Browse an image:** Move the phone in a side-to-side motion to pan from side to side while viewing an image.
  - **Mute/pause:** Mute incoming calls and pause playback by turning the phone screen-side down.
- **Palm motion:** Control your phone by touching the screen with the palm of your hand. Touch **OFF/ON** to turn Palm motion on, then touch **Palm motion** to set options:
  - **Capture screen:** Create a screen capture by the swiping left to right (or right to left) across the screen with the side of your hand.
  - **Mute/pause:** Mute incoming calls and pause playback by covering the screen with your hand.
- **Gyroscope calibration:** Follow the prompts to calibrate your phone's motion sensors.

## Enable Motion Gestures

- Press  and touch  > **Settings** > **My Device** tab > **Motions and gestures** > **Motion**. For more information, see [Motions and Gestures](#).

## Screen Capture

Capture an image of the current screen at anytime time.

- Touch and hold the  **Power/Lock Key** and the  **Home Key** simultaneously to create an image of the current screen. A white border flashes briefly around the edge of the screen indicating a screen capture.

– or –

Swipe left to right (or right to left) across the screen with the side of your hand. (Palm motions must be enabled. For more information, see [Motions and Gestures](#).)

- The screen capture is automatically saved to the Gallery in an Album labeled Screenshots.
- A copy of the screen capture is also saved to the clipboard.




## Smart Screen

Smart screen features allow you to have your phone automatically detect when you are looking at the screen.

- **Smart stay:** The screen will not time out as long as you are looking at it. Smart screen uses the front camera to detect when you are facing the screen. Some factors that may affect the ability of the front camera to detect your face are:
  - When the phone is not docked or held upright, for example when placed on a table.
  - When the front camera cannot detect your face and eyes.
  - When the front camera is being used for the current application.
  - When the source of light is behind you, or when using the phone in the dark.

## Configure Smart Stay

Enable Smart stay, and learn about using them.

- Press  and touch  > **Settings** > **My Device** tab > **Smart screen**.
  - Touch **Smart stay** to set the screen to stay on as long as you are looking at it.
  - Touch  > **Help** for more information.

## Voice Control

Use spoken commands to control and interact with your phone.

- **Incoming calls:** When enabled, you can answer or reject calls with the voice commands “Answer” and “Reject”. When you answer a call with the voice command, the Speaker will automatically be turned on for hands-free talking.
- **Alarm:** When enabled, you can stop or snooze alarms with the voice commands “Stop” and “Snooze”.
- **Camera:** When enabled, you can take pictures with the voice commands “Smile”, “Cheese”, “Capture” and “Shoot”.
- **Music:** When enabled, you can control the music player with the voice commands “Next”, “Previous”, “Pause”, “Play”, “Volume Up”, and “Volume Down”.

### Configure Voice Control

- Press  and touch  > **Settings** > **My Device** tab > **Voice control**. For more information, see [Voice Control](#).

## Enter Text

You can type on your phone using the available touchscreen keyboards.

### Touchscreen Keyboards

Touchscreen keyboard entry can be done in either Portrait or Landscape orientations. The Landscape orientation provides more space and results in slightly bigger on-screen keys. If you find that you prefer to enter text via the on-screen keyboard, and need bigger keys, use this orientation.

### Text Input Methods

Your phone offers several text input methods.

- **Google voice typing** allows you to speak your entries.
- **Samsung keyboard** allows you to enter text by touching keys on a virtual QWERTY keyboard. Samsung keyboard includes optional predictive text, which matches your key touches to common words so you can select a word to insert it into your text.
- **Swype** lets you enter words by swiping across the virtual QWERTY keyboard. Instead of touching each key, use your finger to trace over each letter of a word. You can also touch letters to enter words.

## Select a Default Text Input Method

You can select a default Text Input Method from Settings, or choose one at any time while entering text.

### From Settings

- Press  and touch  > **Settings** > **My Device** tab > **Language and input** > **Default**.



### While Entering Text

1. From a screen where you can enter text, drag down from the top of the screen to open the Notification Panel.
2. Touch **Select input method** and choose a text entry method.

## Google Voice Typing




This feature uses Google voice recognition to convert your spoken words into text.

### Use Google Voice Typing to Enter Text

1. Touch  on the keyboard.
2. At the **Speak now** prompt, speak clearly and distinctly into the microphone. The software converts your voice to text, which is displayed in the message.
3. Keep speaking to add more text.
4. Touch  to display the Samsung keyboard.

**Note:** The feature works best when you break your message down into smaller segments.








 


### Configure Google Voice Typing

- Press  and touch  > **Settings** > **My device** tab > **Language and input**, and then touch  next to Google voice typing. For more information, see [Google Voice Typing](#).

## Samsung Keyboard

The Samsung keyboard is a custom virtual QWERTY keyboard, featuring optional predictive text or continuous input. Input characters by touching the on-screen keys or by using speech recognition.


### Use Samsung Keyboard to Enter Text

1. From a screen where you can enter text, drag down from the top of the screen to open the Notification Panel. Then touch **Select input method > Samsung keyboard**.
2. Touch keys to enter text. While entering text, use these options:
  - **Delete:** If you make a mistake, touch  to delete incorrect characters. Touch and hold  to delete a whole word or field.
  - **Letter Case:** By default, Samsung Keyboard starts with a capital at the beginning of text.
    - Touch  to change to upper case. After you type a letter, Samsung Keyboard automatically changes to lower case.
    - Touch  once or touch  twice to enter all capitals. Touch  to return to lower case.
  - **Symbols:** Touch  to switch to a symbols keyboard. There are two pages of symbols. Touch  to go to the second page. Touch  to return to the alphanumeric keyboard.
  - **Voice Typing:** Touch  to switch to Google Voice typing and enter text by speaking. For more information, see [Google Voice Typing](#).




### Using Predictive Text

By using Predictive text, you can have next-letter prediction and regional error correction, which compensates for touching the wrong keys on the QWERTY keyboard.

While entering characters, potential word matches display in the Predictive text area above the keyboard.

- Touch a word to insert it into your text. Touch  to display more words.

### Configure Samsung Keyboard

- Press  and touch  > **Settings > My device tab > Language and input**, and then touch  next to Samsung keyboard. For more information, see [Samsung Keyboard](#).












## Swype




Swype lets you enter words by tracing over the letters on the virtual QWERTY keyboard. Instead of touching each key, use your finger to trace over each letter of a word. You can also touch letters to enter words.

Swype provides next-letter prediction and regional error correction, which can compensate for touching the wrong keys on the virtual QWERTY keyboards.

### Use Swype to Enter Text

1. From a screen where you can enter text drag down from the top of the screen to open the Notification Panel, and then touch **Select input method > Swype**.
2. Swipe your finger continuously over the letters to form a word. As you swipe over letters, words matching your pattern display at the top of the Swype keyboard. To enter a word, lift your finger, or touch a word at the top of the keyboard.
3. While entering text, use these options:
  - **Letter Case:** By default, Swype starts with a capital at the beginning of text.
    - Touch  to change to upper case. After you type a letter, Swype automatically changes to lower case.
    - Touch  once or touch  twice to enter all capitals. Touch  to return to lower case.
  - **Symbols:** Touch  to switch to a symbols keyboard. There are two pages of symbols. Touch  to go to the second page. Touch  to return to the alphanumeric keyboard.
  - **Delete:** If you make a mistake, touch  to delete a single character. Touch and hold  to delete an entire word or field.

### Configure Swype




- Press  and touch  > **Settings > My device tab > Language and input**, and then touch  next to Swype. For more information, see [Swype Settings](#).

## Editing Text



Your phone gives you many options to make entering text easier—including copying, cutting, and pasting text, using voice-to-text input, and more.

**Note:** Some apps do not support text editing, while others may offer their own way to select and edit text.




### Edit Existing Text

1. Touch the text at the point you want to edit. The selection cursor  displays at the point you touched.
2. Touch and drag  to a better position, if necessary.
3. Enter additional text, or delete text by touching .

### Copy, Delete, or Replace Text

1. Touch and hold the text or word you want to select. The selected text is highlighted between selection cursors .
2. Touch and drag either cursor to select more or less text.
3. On the pop-up menu, touch:
  - **Select all** to highlight all text in the field.
  - **Cut** to remove the selected text.
  - **Copy** to save the selected text to the clipboard.
  - **Paste** to paste previously copied text.
  - **Clipboard** to display the text saved to the clipboard.
  - **Translate** to translate the highlighted word. For more information, see [S Translator](#).
4. Enter text by typing or speaking to replace the selected text.
5. Touch  to delete the selected text.

## Paste Text

1. Touch the text at the point you want to edit. The selection cursor  displays at the point you touched.
2. Touch and drag  to a better position, if necessary.
3. Touch . A pop-up menu displays.
4. Touch **Paste** or touch **Clipboard** to view items on the Clipboard.

# Phone Calls

---




 
With our wireless service and your phone's calling features, you can enjoy clear phone calls across the country.

## Make Phone Calls

There are several convenient ways to place calls from your phone.




### Call Using the Phone Dialer

The most "traditional" way to place a call is by using the phone's dialer screen.

1. Touch  >  **Phone** > **Keypad** tab to display the phone screen.
2. Touch the number keys on the dial pad to enter the phone number.
  - As you enter digits, Smart Dial searches for contacts that match. If you see the number you want to dial, touch it to place the call immediately without entering the rest of the number.
3. Touch  to call the number.
4. To end the call, touch .

### Call from Call Logs




The Call logs list lets you quickly place calls to recent incoming, outgoing, or missed numbers.

1. Touch  >  **Phone** to display the phone app.
2. Touch **Logs** to display the Call logs list.
3. Touch an entry to display the call details.
4. Touch the phone icon  to place a call.
  - For additional options, touch the name or number.

**Tip:** You can also place a call directly from the Call logs list. Swipe the entry you want to call from left to right to place a call.

## Call from Contacts



You can place phone calls directly from entries in your Contacts list.

1. Touch  >  **Phone** to display the phone app.
2. Touch **Contacts** to display the Contacts list.
3. Touch a contact and then touch  next to the number you want to call to place a call.
  - For additional information on Contacts, see [Contacts](#).

**Tip:** You can also place a call directly from the Contacts list. Swipe the entry you want to call from left to right to place a call to the entry's primary number.








## Call Using a Speed Dial Number

Speed dial numbers let you dial numbers by touching and holding a single number on the dial pad. See [Speed Dialing](#) for information on assigning speed dial numbers.

1. Touch  >  **Phone** > **Keypad** tab to display the phone screen.
2. Touch and hold the speed dial key on the dial pad. The display confirms that you have dialed the number when it shows "Dialing" on the upper right side of the screen.

## Call a Number in a Text Message or Email Message


 


While viewing a text message or email message, you can place a call to a number that is in the body of the message.

1. Touch  >  >  **Messaging**.  
– or –  
Touch  >  >  **Email**.
2. Touch the message or email with the phone number, and then touch the phone number.
3. The Phone screen then opens, with the phone number automatically filled in and ready to be dialed. To place the call, touch .




 
 

## Call Emergency Numbers

You can place calls to 911 even if the phone's screen is locked or your account is restricted.

### When the Phone's Screen Is Locked with a Screen Lock

1. Turn on the screen. For more information, see [Turn Your Screen On and Off](#).
2. Touch **Emergency call** on the screen.
3. Touch    .

### When Your Account Is Restricted

1. Unlock the screen. For more information, see [Turn Your Screen On and Off](#).
2. Touch  >  **Phone** > **Keypad** tab.
3. Touch    .

### Enhanced 911 (E911) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your phone seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

**Important:** Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs), may not be equipped to receive GPS location information from your phone.

## Receive Phone Calls

The following information lets you know how to answer incoming calls, mute the ringer on incoming calls, reject incoming calls, and more.

When you receive a phone call from a contact, the Incoming call screen appears and displays the caller ID icon, name, and phone number of the calling party. When you receive a phone call from someone who is not stored in People, only the default caller ID icon and phone number appear on the Incoming call screen.

**Note:** If your phone is turned off, all calls automatically go to voicemail.

### Answer an Incoming Call


- Touch and drag  to the right.

## Mute the Ringing Sound

To mute the ringer without rejecting the call, you can do either of the following:



- Press the volume button down.  
— or —
- Place the phone face down on a level surface.

## Reject an Incoming Call

- Touch and drag  icon to the left. The call will be sent directly to voicemail.

## Reject a Call and Send a Text Message

You can reject an incoming call and automatically send a text message to the caller.

- Drag the **Reject call with message** tab up from the bottom of the screen. Touch **Send** next to one of the reject messages to send it to the caller.
  - You can edit the reject messages through the Call settings menu. Press  and touch  > **Settings** > **My Device** tab > **Call** > **Set up call rejection messages** and edit or create a reject message.

## *Voicemail*

The following topics outline your phone's voicemail service.

**Note:** Your phone also supports the Visual Voicemail app. For information on setting up and using Visual Voicemail, see [Visual Voicemail](#).

## *Voicemail Setup*


You should set up your voicemail and personal greeting as soon as your phone is activated.


- For information on setting up your voicemail, see [Set Up Voicemail](#).

**Tip:** For information on using the Visual Voicemail app, see [Visual Voicemail](#).

## *Voicemail Notification*

There are a couple of different ways your phone alerts you to a new voicemail message.

- By sounding the assigned ringer type.
- By displaying  within the Notifications area of the Status bar when a single new unheard voicemail message is received.




**Note:** When you are roaming off the network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, touch  and enter your password. Roaming rates apply when you access voicemail while roaming off the network.

Your phone accepts messages even when it is turned off. However, your phone notifies you of new messages only when it is turned on and you are in a network service area.




## *Retrieve Your Voicemail Messages*

You can review your messages directly from your wireless phone (using either traditional voicemail or Visual Voicemail) or from any other touch-tone phone.

### Use Traditional Voicemail to Access Your Messages

1. Touch  >  **Phone** > **Keypad** tab.
2. Touch and hold . If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

### Use Visual Voicemail to Access Your Messages





1. Touch  >  **Apps** >  **Voicemail**.
2. Touch an entry to listen to the message.

**Note:** You are charged for airtime minutes when you access voicemail from your wireless phone.

### Use Another Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press the asterisk key on the phone (\*).
3. Enter your password.

### Use Visual Voicemail to Delete Your Messages

1. Touch  >  **Apps** >  **Voicemail**.
2. Open a message and touch .

**Tip:** You can restore messages you have sent to the trash folder. Touch **Inbox** > **Trash**, touch and hold the message you want to restore to the inbox, and then touch the restore icon.






## Visual Voicemail

Visual Voicemail offers a new way to manage your voicemail.

Use Visual Voicemail to:

- View your voicemails as text.
- Choose messages to view. You don't have to listen to them in the order they arrived.
- Archive important messages.
- Compose new messages, and send them to Email, as a text message, or directly to Voicemail.
- Share messages via Email and text message.
- With a Premium account, you can read your voicemails, have them auto-forwarded to Email, or share them with Facebook® or Twitter.

### Access Visual Voicemail

1. Touch  >  **Apps** >  **Voicemail**.
2. Follow the prompts to set up an account and learn about using Visual Voicemail.

**Note:** You can also access Visual Voicemail from the Phone keypad by touching .

# Phone Call Options

Your phone application provides many useful features and options to help you make the most of your calling experience.

## In-Call Options

While you're on a call, you will see a number of onscreen options. Touch an option to select it.




- **Add call:** Touch to initiate a conference call (3-way call).
- **Keypad:** Use the onscreen dial pad to enter additional numbers, for example, an extension or access code.
- **End call:** End the current call.
- **Speaker:** Route the phone's audio through the speaker (On) or through the earpiece (Off).
  - Activate Speaker to route the phone's audio through the speaker. (You can adjust the speaker volume using the volume buttons.)
  - Deactivate Speaker to use the phone's earpiece.

**Warning!** Because of higher volume levels, do not place the phone near your ear during speakerphone use.

- **Mute:** Mute the microphone during an active call. Touch again to unmute the microphone.


 




- **Headset:** Route the phone's audio through a connected Bluetooth headset (On) or through the speaker (Off).

**Note:** The Headset button is activated to show the current call is routed to the connected Bluetooth headset.

- To route the current call back to the phone, touch **Headset** to temporarily use the phone. Touch it again to route the call back to the connected Bluetooth headset.
- Touch  during a call to display a list of additional in-call features. Touch an option to select it:
  - **Contacts:** Display your contacts list.
  - **Memo:** Create a new memo during a call.
  - **Message:** Send a message during a call.
  - **One-handed operation on/off:** Optimize your display for one-handed operation. For more information, see [One-Handed Operation](#).

## Caller ID

Caller ID identifies a caller before you answer the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.


1. Touch  > **Phone** > **Keypad** tab.
2. Touch    .
3. Enter a phone number.
4. Touch .

To permanently block your number, call Sprint Customer Service.

## Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available).


### Respond to an Incoming Call While You're on a Call

- Touch and drag  to the right. (This puts the first caller on hold and answers the second call.)




### Switch Back to the First Caller

- Touch **Swap**.

**Note:** For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing  before placing your call. Call Waiting is automatically reactivated once you end the call.

## Conference Calling

With conference calling, also known as 3-way calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. On the Phone screen, enter a number and touch  (or place a call from Log or Contacts).
2. Once you have established the connection, touch **Add call**, and dial the second number (or place the call from Logs or Contacts).
  - This puts the first caller on hold and dials the second number.
3. When you're connected to the second party, touch **Merge**. Your conference call is now in session.



**Note:** If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.









4. To end the three-way call, touch .

## Call Forwarding







Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when you have activated Call Forwarding.

**Note:** You are charged a higher rate for calls you have forwarded.

### Activate Call Forwarding

1. Touch  > **Phone** > **Keypad** tab.
2. Touch  **\***  **P**  **7**  **PORS**  **2**  **ABC**.
3. Enter the area code and phone number to which you want your calls forwarded.
4. Touch . You will hear a tone to confirm the activation of Call Forwarding.



## Deactivate Call Forwarding

1. Touch  > **Phone** > **Keypad** tab.
2. Touch    .
3. Touch . (You will hear a tone to confirm the deactivation.)


## Speed Dialing

You can assign a shortcut number to a phone number in your Contacts List for speed dialing. There are one hundred available numbered spaces. Speed dial 1 is reserved for Voicemail.




### Assign Speed Dials

1. Touch  > **Phone** > **Keypad** tab.
2. Touch  > **Speed dial setting**.
3. Touch an unused space and then select a contact to assign to the number. The selected contact number will display in the speed dial list.

### Making a Call Using a Speed Dial




1. Touch  > **Phone** > **Keypad** tab.
2. Touch the speed dial digits, holding the last digit until the number dials.

### Edit Speed Dials

1. Touch  > **Phone** > **Keypad** tab.
2. Touch  > **Speed dial setting**.
3. Touch  > **Change order**, and then touch the entry you want to move. This will highlight the entry.
4. Touch an unassigned space. (For example, if you select an entry in space 12, and space 8 shows "Not assigned," you can touch space 8 to move the entry.)

**Note:** If you assign a number to an already in-use speed dial location, the new phone number will replace the previous speed dial assignment.



## Remove Speed Dials

1. Touch  > **Phone** > **Keypad** tab.
2. Touch  > **Speed dial setting**.
3. Touch  > **Remove**, and then touch the X next to the speed dials you want to remove.

## Call Logs

The Logs tab of the Phone application lists all recent incoming, outgoing, and missed calls.


### View Call Logs

1. Touch  > **Phone** to display the phone app.
2. Touch **Logs** to display the Call log list.
  - To change the log view, touch  > **View**. Touch **All calls**, **Missed calls**, **Dialed calls**, **Received calls**, or **Rejected calls** to filter the list.

### Call Log Options




- To make a call from the call log, see [Call from Call Logs](#).

For additional options:

1. Touch  > **Phone** to display the phone app.
2. Touch **Logs** to display the call log.
3. Touch and hold a listing to display the options list.
  - **Copy to dialing screen**: Place the number on the dial keypad.
  - **Send number**: Add the number to a new message.
  - **Add to contacts**: Add the number as a number contact, or use the number to update an existing contact.
  - **View contact**: View contact for this number (if available).
  - **Delete**: Delete the record.

## Clear Call Logs

Use the menu option to clear your call log.

1. Touch  >  **Phone** to display the phone app.
2. Touch **Logs** to display the call log.
3. Touch  > **Delete**.
4. Touch the check box next to **Select all**.
5. Touch **Delete**.

## Call Settings

Your phone's Call Settings menu lets you configure your voicemail options and a number of other settings for the phone application.

- Touch  >  > **Settings** > **My Device** tab > **Call**. For more information, see [Call Settings](#).



# Contacts

---

The Contacts application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your phone as well as contacts synchronized with your Google Account, your PC, compatible email programs (including Exchange Server), and your Facebook friends.

## Get Started with Contacts

Your phone automatically sorts the Contacts entries alphabetically. You can create a Google contact, a phone contact, or a Corporate (Microsoft Exchange ActiveSync) contact.



- Phone contacts are stored locally on the phone.

**Note:** If the phone is ever reset to its factory default parameters, locally stored contacts (phone contacts) can be lost.

- Google contacts are shared with your existing Google Account and can also be imported to your phone after you have created a Google Mail account.
- Microsoft Exchange ActiveSync contacts are shared with a Microsoft Exchange account.







## Access Contacts

You can access contacts from the Contacts app.

- Press  and touch  **Contacts**.

## Add a Contact

You can add contacts directly into the Contacts application. Enter details such as name, phone numbers, email addresses, mailing addresses, and more.

1. Press  and touch  **Contacts**.
2. Touch , and then choose a storage account, if you have multiple accounts set up on your phone.
3. Touch contact fields to enter information. While entering information, touch  to add another field, and touch  to choose a label.
  - **Picture:** Touch the picture icon to assign a picture to the new entry.
  - **Name:** Use the on-screen keyboard to enter the name. Touch  next to the Name field to display additional name fields.

- **Phone:** Enter a phone number.
- **Email:** Enter an email address.
- **Groups:** Assign the contact to a group.
- **Ringtone:** Assign a ringtone for calls from this contact.
- **Message alert:** Assign an alert for new messages from this contact.
- **Vibration pattern:** Assign a vibration pattern for new calls and messages from this contact.
- **Add another field:** Add new field(s) for the contact.




4. Touch **Save**.

## *Edit a Contact*

Once you've added a contact, you can add or edit any of the information in the entry.

### *Add or Edit Information for a Contact*

You can modify existing contact information to keep your information up-to-date.



1. Press  and touch  **Contacts**.
2. Touch a contact to display it, and then touch  > **Edit**.
3. Touch any field you want to change or add. See [Add a Contact](#).
4. Add or edit the information, and then touch **Save**.

**Tip:** You can also touch and hold the contact and then touch **Edit**.

## *Assign a Picture to a Contact*

Adding a picture to a contact entry creates a more personal and easily recognized entry.

### *Use a Photo from Gallery*




1. Press  and touch  **Contacts**.
2. Touch a contact to display it, and then touch the picture icon.

3. Select a picture using the following methods:

- **Image:** Select a picture from the Gallery. Resize or crop the picture by dragging the sides of the blue border, and then touch **Done**.
- **Pictures by people:** Select a picture from those photos which have been tagged with a person's name. Resize the picture by dragging the sides of the blue border, and then touch **Done**.
- **Take picture:** Use the camera to take a new picture.
- **S Memo:** Use an image from one of your S Memos.

## *Link a Contact*




When you have contacts from various sources (Gmail, phone, Facebook, etc.), you may have multiple similar entries for a single contact. Your phone's Contacts application lets you link multiple entries into a single contact.

1. Press  and touch  **Contacts**.
2. Touch a contact to display it, and then touch  > **Link contact**.
3. Touch another entry to link it to the original contact.

**Note:** You can link up to five contacts in a single entry.

## *Delete a Contact*



You can delete a contact from the contacts details page.

1. Press  and touch  **Contacts**.
2. Touch a contact to display it, and then touch  > **Delete**.

**Tip:** You can also touch and hold the contact and then touch **Delete**.

## *Add Contacts to Your Favorites*




The Favorites tab is a listing that can help you quickly access your most used or preferred Contacts entries.

1. Press  and touch  **Contacts**.
2. Touch and hold the entry name from the Contacts tab listing.
3. On the pop-up menu, touch **Add to favorites**.

**Note:** Another method to add or remove an entry from your favorites is to touch the **star** icon on the Contact's details page (upper right).

## Share a Contact

You can quickly share contacts using Bluetooth, Email, Gmail, Messaging, or Wi-Fi Direct.




1. Press  and touch  **Contacts**.
2. Touch a contact to display it, and then touch  > **Share namecard via**.
3. Touch a method of sharing, and follow the prompts to send the namecard.

## Create Groups

This feature allows you to add a new or existing contact to a call group. This group can be one of the already present groups (Family, Friends, or Work) or a user-created group.




### Create a New Group

You can create new groups and add members.

1. Press  and touch  **Contacts** > **Groups** tab.
2. Touch  > **Create**.
3. Enter information about the group:
  - Touch the **Group name** field and enter a name for the new group.
  - Touch **Group ringtone** to assign a ringtone for this group.
  - Touch **Message alert** to assign an alert tone for this group.
  - Touch **Vibration pattern** to assign a vibration pattern for this group.
  - Touch **Add member** and select a member or members to add to the new Group.
4. Touch **Done** when you are finished adding members, and then touch **Save**.




### Add a Contact to a Group

You can add new members to a group from your Contacts.

1. Press  and touch **Contacts**  > **Groups** tab.
2. Touch a group to display it, and then touch .
3. From the list of contacts, touch each contact(s) you want to add, or touch **Select all**.
4. Touch **Done** to add the contact(s) to the group.

## *Send an Email to Group Members*

You can send an email to all or selected members of a group.

1. Press  and touch  **Contacts** > **Groups** tab.
2. Touch an existing group and then touch  > **Send email**.
3. From the list of contacts, touch each contact(s) you want as recipient(s), or touch **Select all**.
4. Compose your email. For more information, see [Compose and Send Email](#).

# Accounts and Messaging

---

Set up accounts on your phone to synchronize information between your phone and accounts.

## Google Account

Many of your phone's applications, such as Gmail, Google Maps, Hangouts, and the Google Play Store, require a Google Account. To use these applications, you must set up your Google Account on your phone. Setting up your account on your phone syncs your phone and your online Google Account.

### Create a Google Account



If you do not already have a Google Account, you can create one online or using your phone.

**Note:** Although you need a Gmail account to use certain features of your phone, such as Google Play Store, you do not need to use Gmail as the default account for your phone.

#### Create a Google Account Online




1. From a computer, launch a Web browser and navigate to [google.com](https://google.com).
2. Follow the on-screen prompts to create your account.

#### Create a Google Account Using Your Phone

1. Press  and touch  > **Settings** > **Accounts** tab.
2. Touch **Add account** > **Google**.
3. Follow the on-screen prompts to create your account.

## Gmail





Gmail is Google's web-based email. After you set up your Google Account on your phone, you are automatically signed in to your Gmail account and you can access Gmail from your phone.


1. Press  and touch  **Apps** >  **Gmail**.
2. Do any of the following:
  - **View more email messages:** If the Inbox is full, swipe your finger up the screen to view more messages and conversations.
  - **Read a new email message:** Touch the unread message or the conversation with an unread message (just-arrived items display in bold).






- **Select messages and conversations:** Touch the box before the email or conversation.
- **View the Inbox of another Gmail account:** Touch Inbox at the top of the screen and then touch the inbox of the Gmail account you want to view.

## Send a Gmail Message

Below are procedures for sending a Gmail.

1. Press  and touch **Apps**  > **Gmail** .
2. From the Inbox, touch .
3. Enter the message recipient's email address in the **To** field. You can add multiple recipients.

**Note:** To send a carbon copy (CC) or a blind carbon copy (BCC) of the email to other recipients, touch  > **+CC/BCC**.

4. Touch **Subject** and enter the email subject.
5. Touch **Compose** email and compose your message.
  - To add a picture attachment, touch  > **Attach picture**.
  - To add a video attachment, touch  > **Attach video**.
6. To send the message, touch .
  - To save the current email as a draft, touch  > **Save draft**. To later view your draft email messages, from the Inbox, touch **Inbox** and then touch **Drafts**.
  - To delete the current email message, touch  > **Discard**.


## Read and Reply to Gmail Messages

Below are procedures for reading and replying to Gmail messages.

1. Press  and touch **Apps**  > **Gmail** .
2. Touch a message to display its contents.

**Tip:** You can also access new messages through the Notifications bar. When a new Gmail message arrives, you'll see the icon in the Notifications bar. Touch, hold, and drag the bar down to display notifications. Touch a message to display it.

3. Touch  to create a reply message.



4. From the menu at the top left of the screen, touch **Reply**, **Reply all**, or **Forward**.
5. To send the message, touch .

## Email

Use the Email application to send and receive email from your webmail or other accounts. You can also access your Exchange ActiveSync email on your phone.

### Add an Email Account

Email allows you to send and receive email using various email services. You can also receive text message alerts when you receive an important email.



1. Press  and touch  > **Settings** > **Accounts** tab.
2. Touch **Add account** > **Email**.
3. Enter your email address in the **Email address** (account@example.com) field.
4. Enter your password in the **Password** field. To see your password as you enter it, touch **Show password**.
5. Touch **Next**, and follow the on-screen prompts to configure options for the account.

### Add a Microsoft Exchange ActiveSync Account

The Email application also provides access to your Microsoft Exchange account from your phone. If your company uses Microsoft Exchange Server 2003, 2007, or 2010 as the corporate email system, you can use this email application to wirelessly synchronize your email, Contacts, and Task information directly with your company's Exchange server.

Use the following procedure to synchronize your phone with a corporate email account.

**Note:** You can set up multiple Microsoft Exchange ActiveSync accounts on your phone.








1. Press  and touch  > **Settings** > **Accounts** tab.
2. Touch **Add account** > **Microsoft Exchange ActiveSync**.
3. Enter your email address in the **Email address** (account@example.com) field.
4. Enter your password in the **Password** field. To see your password as you enter it, touch **Show password**.
5. Touch **Next**, and follow the on-screen prompts to configure options for the account.

**Note:** Consult your network administrator for assistance in configuring your account.










## Compose and Send Email

Compose and send email using any account you have set up on your phone. Increase your productivity by attaching files such as pictures, videos, or documents to your email messages.

1. Press  and touch  **Apps** >  **Email**.
2. From the Inbox, touch 
  - Touch the **From** field and select an available account (if you have more than one account set up on your phone).
  - Touch the **To** field and enter the recipient's email address in the To field. You can add as many message recipients as you want.
  - To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, add their email addresses in the **Cc/Bcc** field.
  - To send a copy of the message to yourself, touch  > **Send email to myself**.
  - Touch the **Subject** field and enter the email subject.
3. Touch the text area to compose your email.
  - To add an attachment, touch .
4. To send the message, touch .

## View and Reply to Email




Reading and replying to email on your phone is as simple as on your computer.

1. Press  and touch  **Apps** >  **Email**.
2. From the email account Inbox, touch a message to view it.
3. Touch  (**Reply**) to reply to the sender,  (**Reply to All**) to reply to all senders/recipients, or  (**Forward**) to forward the message to new recipient(s).
4. Enter a message (if desired) and then touch .

## Manage Your Email Inbox





The following procedures allow you to view, refresh, sort, and delete your email messages.

### View Your Email Inbox





1. Press  and touch  **Apps** >  **Email**.
2. Touch the account name field (top left corner) to list all of your email accounts.
3. Select an email account, then touch an email message.

### Refresh an Email Account





Whatever your automatic synchronization settings are, you can also synchronize your sent and received email messages manually at any time.

1. Press  and touch  **Apps** >  **Email**.
2. Select an email account.
  - If you are already in an email account, touch the account name field (top left corner) to list all of your email accounts.
  - Select an available email account.
3. Touch  **Refresh**.

### Sort Email Messages

1. Press  and touch  **Apps** >  **Email**.
2. From the email account Inbox, touch  > **Sort by**.
3. Select from the options to sort email messages by: date received (most recent or oldest), by sender, read/unread status, attachments, starred favorites, priority, subject, flag, request, meeting requests, or size. (Not all options are available for all email accounts.)

### Delete an Email Message

1. Press  and touch  **Apps** >  **Email**.
2. From the email account Inbox, Touch the check box next to each email you want to delete.
3. Touch  **Delete**.

## Text and Multimedia Messaging







With Text Messaging (SMS), you can send and receive text messages between your phone and another phone that supports messaging.

Multimedia messages, (MMS), can contain text and pictures, recorded voice, audio or video files, picture slideshows, contact namecards (vCard), or calendar events (vCalendar).

See your service plan for applicable charges for messaging.



### Send a Message

Quickly compose and sent text and multimedia messages on your phone.

1. Press  and touch  **Apps** >  **Messaging**.
2. Touch .
3. Touch **Enter recipient**, and then enter a contact name, a mobile phone number, or an email address. As you type, possible matches from your accounts and contacts display on the screen. Touch a match to add it to the message.
4. Touch the **Enter message** field and type your message.
5. To add an attachment, touch  and select a file:
  - **Image**: Choose a picture from Gallery.
  - **Take picture**: Launch the Camera to take a photo, and then add it to your message by touching **Save**.
  - **Video**: Choose a video from Gallery.
  - **Record video**: Launch the Camera to record a video, and then add it to your message by touching **Save**.
  - **Audio**: Choose a sound from Music.
  - **Record audio**: Launch Voice Recorder to record a new sound.
  - **S Memo**: Launch S Memo to choose or create a memo. For more information, see [S Memo](#).
  - **Calendar**: Add an event from your calendar.
  - **Location**: Attach a map showing your location.
  - **Contacts**: Add a contact entry (namecard) to the message.
6. When done, touch  to send the message.

## *New Messages Notification*

Depending on your notification settings, the phone will play a ringtone, vibrate, or display the message briefly in the Status bar when you receive a new message. To change the notification for new messages, see [Messaging Settings](#) for details.




A new message icon  also appears in the notifications area of the Status bar to notify you of a new message. The Messaging application icon  also displays the number of new messages.

To open the message, touch and hold the Status bar, and then slide the Status Bar down to open the Notifications panel. Touch the new message to open and read it. For information on reading and replying to messages see [Managing Messages](#).

## *Managing Messages*





Messages that are sent to and received from a contact (or a number) are grouped into conversations or 'threads' in the All messages screen. Threads let you see all exchanged messages with a contact.

### *View a Message*




1. Press  and touch  **Apps** >  **Messaging**.
2. From the message list, touch a message to display it.
  - To view the details of a particular message, in the message thread, touch and hold the message to open the options menu, and then touch **View message details**.
  - If a message contains a link to a Web page, touch the message and then touch the link to open it in the Web browser.
  - If a message contains a phone number, touch the message and then touch the phone number to dial the number or add it to your contacts.
3. While viewing a MMS message, touch the play icon (on a video or audio file) to play back the file or touch an image to view a picture.


**Note:** File attachments on a MMS message can be saved to an optional memory card (not included). Touch and hold on the attachment, and then touch **Save attachment**. Select the attachment and touch **Save**.

## Reply to a Message

1. Press  and touch  **Apps** >  **Messaging**.
2. From the message list, touch a message to display it.
3. Touch the **Enter message** field and then type your reply message.
4. When finished, touch .




## Delete a Message

1. Press  and touch  **Apps** >  **Messaging**.
2. Touch and hold the message or thread that you want to delete.
3. From the pop-up menu, touch **Delete message** or **Delete thread**.

**Tip:** To delete several message threads at once, touch  > **Delete threads**. Select the threads you want to delete and touch **Delete**.





## Protect a Message from Deletion

You can lock a message so that it will not be deleted even if you delete the other messages in the thread.

1. Press  and touch  **Apps** >  **Messaging**.
2. On the Messaging screen, touch a message thread.
3. Touch and hold the message that you want to lock.
4. Touch **Lock message** on the options menu. A lock icon displays at the lower right hand side of the message.

## Messaging Settings

The messages settings menu lets you control options for your text and MMS messages including message limits, size settings, and notifications.

1. Press  and touch  **Apps** >  **Messaging**.
2. Touch  > **Settings**.
3. Configure message settings:
  - **Delete old messages:** Automatically delete the oldest messages when the maximum number of messages is reached. Set the maximum number of messages with the Text message limit and Multimedia message limit settings below.

- **Text message limit:** Set the maximum number of text messages per conversation.
- **Multimedia message limit:** Set the maximum number of multimedia messages per conversation.
- **Text templates:** Create and manage text strings that you can add to messages.
- **Auto combination:** Determine whether long messages that are received in multiple parts are automatically re-assembled to display as a single message.
- **Group messaging:** Control how messages to multiple recipients are handled. When enabled, a single message is sent to multiple recipients. When disabled, a separate message is sent to each recipient.
- **Auto retrieve:** Control whether message attachment(s) are automatically downloaded when you display a multimedia message. If you disable this option, only the message header displays in the message list, and you'll be prompted to download the attachment(s).
- **Roaming auto retrieve:** Control whether message attachment(s) are automatically downloaded while your phone is in roaming mode.
- **MMS alert:** Set the phone to alert you when you make a change to a message that will convert the message to a multimedia message (MMS).
- **Bubble style:** Control how messages appear on the screen. Bubbles are the boxes that surround each message.
- **Background style:** Set the background of the message screen.
- **Split view:** Turn on split view on landscape screen.
- **Use the volume key:** Enable changing the text size while reading a message by pressing the Volume Key up or down.
- **Notifications:** Control whether notifications for new messages display in the Status bar.
- **Select ringtone:** Set the ringtone for your message notifications.
- **Vibrate:** Set whether vibration plays along with the ringtone for new message notifications.
- **Message alert repetition:** Set how often your phone notifies you of new message(s).
- **Preview message:** Control whether a preview of a new message appears in the Status bar with the message notification.

- **Emergency Alerts:** Configure emergency alert settings. You can enable or disable some alerts: Extreme Alert, Severe Alert, Amber Alert, and Emergency alert test messages. You cannot disable Presidential alerts.

**Important!** The Commercial Mobile Alert System (CMAS) system provides the government the ability to send geographically targeted notifications of emergencies, such as threats to public safety, severe weather events, a hazardous material spill or a missing child in the phone user's area.




- **Emergency notification preview:** Plays a sample emergency alert tone. Touch **Stop** to cancel the playback.
- **Vibrate:** Sets vibrate options for emergency messages.
- **Alert reminder:** Sets the reminder interval.
- **Add signature:** Adds a text signature to all messages you send.
- **Signature text:** Creates the text signature, when Add signature is enabled.
- **Spam settings:** Filters incoming messages for spam messages.
- **Add to spam numbers:** Enables you to add telephone numbers which will be automatically flagged as spam, when Spam settings is enabled.
- **Add to spam phrases:** Enables you to add text phrases which will be automatically flagged as spam, when Spam settings is enabled.
- **Block unknown senders:** Automatically blocks messages from numbers that are not stored as contacts on your phone.

## *Social Networking Accounts*

Stay in touch on the go with all your social networking accounts.

### *Flipboard*

The Flipboard application creates a personalized digital magazine out of everything being shared with you. Access news stories, personal feeds and other related material. Flip through your Facebook newsfeed, tweets from your Twitter account, photos from friends and much more.




1. Press  and touch  **Apps >  Flipboard.**
2. Follow the on-screen instructions.

## Messenger

Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your phone.

Messenger uses your Google Account. If you don't already have a Google Account set up on your phone, you can set one up.




**Note:** You must be currently signed into your Google Account to use this app.

1. Press  and touch  **Apps** >  **Messenger**.
2. Follow the on-screen instructions.

## Google+

Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+. Visit [google.com/mobile/+](http://google.com/mobile/+) for more information.

**Note:** You must be currently signed into your Google Account to use this app.

1. Press  and touch  **Apps** >  **Google+**.
2. Follow the on-screen instructions.

## Hangouts

Previously known as Google Talk, Hangouts is an online place to meet friends and family, share photos, and host video calls. Conversation logs are automatically saved to a Chats area in your Gmail account.

**Note:** You must be currently signed into your Google Account to use this app.

1. Press  and touch  **Apps** >  **Hangouts**.
2. Follow the prompts to begin using Hangouts.



## YouTube

YouTube is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts, and other original videos.

YouTube is a data-intensive feature. Check your data plan to avoid additional data charges.

- Press  and touch  **Apps** >  **YouTube**.

**Note:** It is not necessary to sign in to the YouTube site to view content. However, if you wish to sign in to access additional options touch the ACCOUNT tab. Select an account (if available) or create a new account. (Even if you sign in to YouTube via the Web, you must separately sign in via your phone.)

# Apps and Entertainment

---

All your phone's features are accessible through the Apps list.

## Google Play Store

The Google Play Store is the place to go to find new Android apps, games, movies, music, and books for your phone. Choose from a wide variety of free and paid apps ranging from productivity apps to games. When you find an app you want, you can easily download and install it on your phone.




To access the Google Play Store you must have a Google Account set up on your phone. See [Google Account](#) for details.

**Important!** Third-party applications may access your personal information or require your service provider to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

## Find and Install an App

When you install apps from the Google Play Store app and use them on your phone, they may require access to your personal information (such as your location, contact data, and more) or access to certain functions or settings of your phone. Download and install only apps that you trust.

**Note:** You need a Google Wallet account to purchase items from the Google Play Store app.

1. Press  and touch  **Apps** >  **Play Store**.
2. Browse through the categories, find an app you're interested in, and touch the name.
3. Follow the prompts to download and install the app.

**Warning! Read the notification carefully!** Be especially cautious with apps that have access to many functions or a significant amount of your data. Once you touch OK on this screen, you are responsible for the results of using this item on your phone.

## Create a Google Wallet Account

You must have a Google Wallet account associated with your Google Account to purchase items from the Google Play Store app.

Do one of the following:

- On your computer, go to [google.com/wallet](https://google.com/wallet).
- or -
- The first time you use your phone to buy an item from the Google Play Store app, follow the prompts to enter your billing information and set up a Google Wallet account.

**Warning!** When you've used Google Wallet once to purchase an item from the Google Play Store app, the phone remembers your information, so you don't need to enter it the next time. For this reason, you should secure your phone to prevent others from using it without your permission. For more information, see [Security Settings](#).



## Open an Installed App

You can access newly installed apps on the Apps screen.

- Press  and touch  **Apps** and touch the app icon.

## Uninstall an App

You can uninstall any app that you have downloaded and installed from Google Play. You cannot uninstall apps that are preloaded on your phone.

1. Press  and touch  > **Settings** > **More** tab > **Application manager** > **Downloaded**.
2. Touch the app you want to uninstall, and then touch **Uninstall**.
3. Follow the prompts to complete the uninstall.

## Google Play Books

With Google Play Books, you can find more than 3 million free e-books and hundreds of thousands more to buy in the Google Play Store.

- Press  and touch  **Apps** >  **Play Books**.

## Google Play Magazines




With Google Play Magazines, you can subscribe to your favorite magazines and have them available to read on your phone at any time or any place.

- Press  and touch  **Apps** >  **Play Magazines**.

## Google Play Movies & TV


The Google Play Movies & TV application allows you to connect to the Google Play Store and download a movie or TV show to watch instantly. Choose from thousands of movies and TV shows, including new releases and HD titles in Google Play and stream them instantly on your Android phone. Previously rented movies are automatically added to your My Movies library.

To learn more about Google Play Movies & TV, visit: [play.google.com/about/movies](http://play.google.com/about/movies).

1. Press  and touch  **Apps** >  **Play Movies & TV**.
2. Follow the on-screen instructions for renting and viewing movies.

## Group Play

Use Group Play to share media from your phone to other phones, via Wi-Fi, using your phone as an AP (Access Point).

Many of your phone's apps offer sharing via Group Play. Touch  to find sharing options, usually from the Share via list of options.




To use Group Play, all participants must be connected to the same Wi-Fi network.

**Important!** If you are using Group Play via an unsecured Wi-Fi network, your information may be vulnerable to unauthorized third parties while being transferred.

Use Group Play only for personal and non-profit purposes. Using Group Play for commercial use violates copyright law. The company is not responsible for copyright infringement by users.

### Create a Group and Share

**Note:** To use Group Play, all participants must be connected to the same Wi-Fi network.

1. Press  and touch  **Apps** >  **Group Play**.
2. Read the disclaimer and touch **Agree**.
3. Touch **Set group password** > **Create Group**, and then follow the prompts to create a group. You'll need to set up a group password, which participants will use to join your Group Play session.
4. After you create the group, your phone turns on the mobile AP (Access Point). Follow the on-screen directions to bring other phones back-to-back with your phone to join the group.

5. Share and play content:

- **Share music:** Select music stored on your phone or on an optional installed memory card (not included).
- **Share pictures:** Select pictures stored on your phone or on an optional installed memory card (not included).
- **Share document:** Select documents stored on your phone or on an optional installed memory card (not included).
- **Play games and more:** Play games with others in the group.

**Note:** For more information about using Group Play, touch  > **Help**.

## Music

Your phone lets you discover, download, and listen to your favorite music through a variety of applications.

### Google Play Music

Google Play Music lets you browse, shop, and play back songs purchased from the Google Play Store app, as well as songs you have loaded from your own music library. The music you choose is automatically stored in your Google Music library and instantly ready to play or download.

To learn more about Google Play Music, visit [play.google.com/about/music](http://play.google.com/about/music).




- Press  and touch  **Apps** >  **Play Music**.

### Music (App)

Your phone's built-in music player app lets you listen to and organize music files you have loaded into your phone's memory or microSD card.


**Note:** For information about loading music onto your phone, see [Transfer Files Between Your Phone and a Computer](#).

#### Listen to Music

1. Press  and touch  **Apps** >  **Music**.
2. Touch a library category at the top of the screen: **Songs**, **Playlists**, **Albums**, **Artists**, **Music square**, or **Folders** to view available music files.
3. Scroll through the list of songs and touch an entry to begin playback.



4. The following music controls are available:

- **Select Device:** Streams the current music file to another device using Screen Mirroring. For more information, see [Screen Mirroring](#).
- **Favorite:** Assign the current song as a Favorite.
- **Shuffle:** Shuffles the current list of songs randomly, or play songs in order.
- **Elapsed Time:** Amount of time the song has been playing.
- **Library:** Return to the song library.
- **Reverse:** Touch and hold to rewind the song. Touch to go to previous song.
- **Pause:** Pause playback of the song. Touch  to play the song after pausing.
- **Forward:** Touch and hold to fast-forward the song. Touch to go to next song.
- **Current Playlist:** Touch to display songs in current playlist.
- **Song Length:** Length of the song.
- **Repeat:** Repeat the current song, repeat all songs, or disable repeat mode.
- **Playback Position:** Touch and drag the dot to move anywhere in the song.
- **SoundAlive:** Enhance the music with effects.
- **Volume:** Display the volume control. Slide the dot up and down to adjust the volume. The Volume Key can also be used to adjust the volume.

## Google Maps

Use the Google Maps application to find directions, location information, business addresses, etc. Determine your current location with or without GPS, get driving and transit directions and get phone numbers and addresses for local businesses.

### Enable Location Services on Your Phone

Google Maps may require you to turn on Location services. For more information, see [Location Services](#).

- Press  and touch  **Apps** >  **Maps**.

## Navigation

Navigation is another Google Maps application available on your phone. It uses your current location to provide turn-by-turn guidance to your destination.

- Press  and touch  **Apps** >  **Navigation**.

## Local

Google Local uses your location to help you find nearby destinations, such as restaurants, bars, hotels, attractions, ATMs and gas stations, or you can enter a location. The Local service is accessible through the Google Maps app.

- Press  and touch  **Apps** >  **Local**.




## Samsung Link

Samsung Link makes staying connected easy. You can wirelessly synchronize your Samsung phone with your TV, stream content, and even keep tabs on who calls or sends text messages with real-time, on-screen monitoring.

Samsung Link allows users to share their in-phone media content with other external phones using DLNA certified™ (Digital Living Network Alliance) Phones. These external phones must also be DLNA-compliant. Wi-Fi capability can be provided to TVs via a digital multimedia streamer (not included).

Samsung Link uses your Samsung account. The first time you launch Samsung Link, follow the prompts to sign in to your Samsung account, or create a new account.




 
Both your phone, and the phones that connect to your phone, must be on the same Wi-Fi access point (AP). For more information about using Wi-Fi, see Wi-Fi.

1. Press  and touch  **Apps** >  **Samsung Link**.
2. Follow the prompts to sign in to your Samsung account and learn about Samsung Link.
3. On the Samsung Link screen, swipe your finger left or right across the screen to scroll between:
  - **MY RECENT CONTENT:** Media you've recently viewed.
  - **DEVICES & STORAGE:** Choose an option:
    - **Registered storage:** Add storage service(s) to view multimedia files anywhere. Storage services include Web storage, such as Dropbox or other services. Web storage is sometimes referred to as the "cloud."
    - **Registered devices:** Stream or share multimedia content from your phone to other DLNA-compliant phones connected to the same Wi-Fi network. When you launch Samsung Link, compatible phones on the same Wi-Fi network display automatically in Registered phones

## *Use Samsung Link to Share Media with Another Device*




Share media with another DLNA-compliant phone via Samsung Link.

Both your phone, and the device(s) that connect to your phone, must be on the same Wi-Fi access point (AP). For more information about using Wi-Fi, see [Wi-Fi](#).

1. Press  and touch  **Apps** >  **Samsung Link**.
2. Launch AllShare Play or Samsung Link on the target device.
3. On the PHONES & STORAGE screen, touch your phone, and then touch media file(s) to select them for streaming.
4. Touch , and then choose a phone for sharing. Your phone requests permission for sharing from the target phone.
5. Follow the prompts on the target phone to allow sharing.

## *Story Album*

Create albums containing your special moments and keep them in one place using your timeline.

1. Press  and touch  **Apps** >  **Story Album**.
2. Follow the on-screen instructions.



## TripAdvisor

Get assistance finding hotels, restaurants, and attractions in any destination. See millions of reviews, opinions and candid photos from travelers just like you.


1. Press  and touch  **Apps** >  **TripAdvisor**.
2. Follow the on-screen instructions.

## WatchON

Enjoy all of your favorite movies and TV shows with WatchON.

**Important:** Before you use WatchON, verify that you have an active Internet connection available. For more information, see [Wi-Fi](#).

**Note:** You need an active Samsung account on your phone to use WatchON. Sign into your Samsung account prior to using WatchON.

1. Press  and touch  **Apps** >  **WatchON**.
2. Follow the on-screen instructions.

# Web and Data

---

The following topics address your phone's data connections and the built-in Web browser. Additional data-related features can be found in [Accounts and Messaging](#), [Apps and Entertainment](#), and [Tools and Calendar](#).

Your phone's data capabilities let you wirelessly access the Internet or your corporate network through a variety of connections, including:

## Internet

Your phone's Web browser gives you full access to both mobile and traditional websites on the go, using your phone's 3G, 4G, or Wi-Fi data connections.

- Press  and touch  **Apps** >  **Internet**.

## Chrome

Use Chrome for Mobile to browse fast and sign in to bring your Chrome experience from your computer, anywhere you go.

For more information, visit [google.com/intl/en/chrome/browser/mobile](http://google.com/intl/en/chrome/browser/mobile).

- Press  and touch  **Apps** >  **Chrome**.

## Lumen Toolbar

The Lumen Toolbar makes the mobile web more social and more useful than ever before. Extensions like Facebook, Twitter, Related Apps, Offers, Readability and many more allow you to stay connected, find deals, browse apps and save browsed content for later – all without leaving the page you're currently on.

- Press  and touch  **Apps** >  **Lumen Toolbar**.

## Data Services (3G and 4G)

With your phone and its wireless features, you are ready to start enjoying the advantages of data services. The following topics will help you learn the basics of using data services, including managing your user name, launching a data connection, and navigating the Web with your phone.

**Important:** Certain data services requests may require additional time to process. While your phone is loading the requested service, the touchscreen keyboard may appear unresponsive when in fact it is functioning properly. Allow the phone some time to process your data usage request.

## Your Data Services User Name

When you buy your phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number.

### Find Your User Name

1. Press  and touch  > **Settings** > **More** tab > **About device**.
2. Touch **Status**, and then find your user name.



## 4G Services

4G provides your phone with wireless Internet access over greater distances than Wi-Fi and delivers data transfer rates of up to 30 Mbps. To connect your phone to 4G network, you need access to a 4G base station.

For more information about the availability of 4G in your location, visit [sprint.com/coverage](http://sprint.com/coverage).

**Note:** The availability and range of the 4G network depends on a number of factors including your distance to the 4G base station, and infrastructure and other objects through which the signal passes.

### Turn 4G On and Connect to the 4G Network

1. Press  and touch  > **Settings** > **Connections** tab > **More networks** > **Mobile networks** > **Network mode**.
2. Select **CDMA, LTE / CDMA, GSM / UMTS**, or **Automatic**. The phone will scan for the 4G network and will automatically connect to it.

When your phone is connected to the 4G network, the **4GLTE** appears in the status bar and tells you the approximate signal strength (number of bands displayed).



**Note:** The 4G network is self-discoverable, which means no additional steps are required for your phone to connect to it.

Your phone supports 4G LTE. 4G is a service that must be included in your service plan and also available in your area. 4G coverage is currently available in only certain markets.

**Note:** If 4G service is not available in your location, the **4GLTE** will not appear in the Notifications area.

Not all services are available on 4G and coverage may default to 3G/separate network where 4G unavailable.

Depending on which icons appear in the Notifications area, your services and features will change. The following table indicates what functions and features are available when combinations of these service icons appear:

Icon	Description
	<b>3G Coverage:</b> The phone is connected to a 3G network. When data is being transferred, the arrows are colored.
	<b>4G Coverage:</b> The phone is connected to a 4G network. When data is being transferred, the arrows are colored.

## Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your phone's Wi-Fi, you need access to a wireless access point or "hotspot."



The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.

### Turn Wi-Fi On and Connect to a Wireless Network

By default, your phone's Wi-Fi feature is turned off. Turning Wi-Fi on makes your phone able to discover and connect to compatible in-range Wi-Fi networks (or WAPs—wireless access points).



When Wi-Fi is turned On, your phone will notify you of available Wi-Fi networks, and you can connect to the Wi-Fi networks. Turn Wi-Fi Off when not in use, to conserve battery power.

#### Turn Wi-Fi On or Off



1. Press  and then touch  > **Settings** > **Connections** tab.
2. Touch **OFF/ON** to turn Wi-Fi on or off.

**Note:** You can also turn Wi-Fi On or Off from Notifications. Drag down from the top of the screen, then touch the **Wi-Fi** button.

#### Connect to a Wi-Fi Network



1. Press  and then touch  > **Settings** > **Connections** tab.
2. Touch **OFF/ON** to turn Wi-Fi on, then touch **Wi-Fi**.
3. The network names and security settings (Open network or Secured with xxx) of detected Wi-Fi networks are displayed.
  - When you select an open network, you will be automatically connected to the network.
  - When you select a secured network, you will need to enter the wireless password to connect to the network. Enter the password and touch Connect. You can use the **show password** option to display the password as you enter it.

## Manually Add a New Network Connection

1. Press  and then touch  > **Settings** > **Connections** tab.
2. Touch **OFF/ON** to turn Wi-Fi on, then touch **Wi-Fi**.
3. Touch **Add Wi-Fi network**.
4. Enter the **Network SSID**. This is the name of your Wi-Fi network.
5. Touch the **Security** field and select a security option. This must match the current security setting on your target network.
6. Touch **Connect** to store the new information and connect to the Wi-Fi network.

**Note:** The next time your device connects to a previously accessed or secured wireless network, you are not prompted to enter the wireless password again, unless you reset your device back to its factory default settings.

## Scan for a Wi-Fi Network



1. Press  and then touch  > **Settings** > **Connections** tab.
2. Touch **OFF/ON** to turn Wi-Fi on, then touch **Wi-Fi**.
3. Touch **Scan**.

## Wi-Fi Settings

For information about configuring Wi-Fi settings, see [Wi-Fi Settings](#).

## Wi-Fi Direct

Wi-Fi Direct allows devices to connect to each other directly via Wi-Fi, without a Wi-Fi network or hotspot, and without having to set up the connection. For example, your phone can use Wi-Fi Direct to share photos, contacts and other content with other Wi-Fi Direct devices.

1. Press  and then touch  > **Settings** > **Connections** tab.
2. Touch **OFF/ON** to turn Wi-Fi on, then touch **Wi-Fi**.
3. Touch **Wi-Fi Direct** at the bottom of the screen. Your phone automatically scans for nearby Wi-Fi Direct devices, or you can touch **Scan** to begin a new scan.

4. After scanning for devices, select a device, then follow the prompts to complete the connection.

– or –

Touch **Multi connect** to create a connection to devices that support multi connect.

Touch **Scan** to search for available multi connect devices, then select the device and follow the prompts to complete the connection.

5. Touch  > **Help** to get additional information about Wi-Fi Direct.

## Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices. The Bluetooth communication range is usually approximately 30 feet.

### Turn Bluetooth On or Off

The following procedure will show you how to turn Bluetooth on and off.

**Note:** Turn off Bluetooth when not in use to conserve battery power, or in places where using a wireless device is prohibited, such as aboard an aircraft and in hospitals.



1. Press  and then touch  > **Settings** > **Connections** tab.
2. Touch **OFF/ON** to turn Bluetooth on or off.

**Tip:** You can also turn Bluetooth on and off through the Notification Panel. Drag the Notification Panel down and touch **Bluetooth** to enable or disable Bluetooth.


### Connect a Bluetooth Headset or Car Kit

You can listen to music over a Bluetooth stereo headset, or have hands-free conversations using a compatible Bluetooth headset or car kit. It's the same procedure to set up stereo audio and hands-free devices.

To listen to music with your headset or car kit, the headset or car kit must support the A2DP Bluetooth profile.

1. Press  and then touch  > **Settings** > **Connections** tab.
2. Touch **OFF/ON** to turn Bluetooth on, then touch **Bluetooth**.
3. Make sure that the headset is discoverable, so that your phone can find the headset. Refer to the instructions that came with the headset to find out how to set it to discoverable mode.
4. Touch **Scan**. Your phone will start to scan for Bluetooth devices within range.



5. When you see the name of your headset displayed in the Available devices section, touch the name. Your phone then automatically tries to pair with the headset.
6. If automatic pairing fails, enter the passcode supplied with your headset.

The pairing and connection status is displayed below the hands-free headset or car kit name in the Bluetooth devices section. When the Bluetooth headset or car kit is connected to your phone,  (Bluetooth connected) displays in the Status bar. Depending on the type of headset or car kit you have connected, you can then start using the headset or car kit to listen to music or make and receive phone calls.

**Note:** Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

## *Reconnect a Headset or Car Kit*

When you have paired a headset with your phone, you should be able to reconnect it automatically by turning on Bluetooth on your phone and then turning on the headset. However, sometimes you will need to reconnect manually, such as when you have been using your headset with another Bluetooth device.


1. Press  and then touch  > **Settings** > **Connections** tab.
2. Touch **OFF/ON** to turn Bluetooth on, then touch **Bluetooth**.
3. Make sure that the headset is discoverable.
4. Touch the headset's name in the Available devices section.
5. If prompted to enter a passcode, try 0000 or 1234, or consult the headset or car kit documentation to find the passcode.
6. If you still cannot reconnect to the headset or car kit, follow the instructions in [Disconnect or Unpair From a Bluetooth Device](#) and then follow the instructions in [Connect a Bluetooth Headset or Car Kit](#).

## *Disconnect or Unpair from a Bluetooth Device*

Follow these instructions to disconnect or unpair your device from a Bluetooth device.




### **Disconnect from a Bluetooth Device**

1. Press  and then touch  > **Settings** > **Connections** tab.
2. Touch **OFF/ON** to turn Bluetooth on, then touch **Bluetooth**.

3. In the Available devices section, touch  next to the device, and then select **Disconnect**.
4. Touch **OK**.

## Unpair from a Bluetooth Device

You can make your device forget its pairing connection with another Bluetooth device. To connect to the other device again, you may need to enter or confirm a passcode again.

1. Press  and then touch  > **Settings** > **Connections** tab.
2. Touch **OFF/ON** to turn Bluetooth on, then touch **Bluetooth**.
3. In the Available devices section, touch  next to the device, and then select **Unpair**.

## Bluetooth Settings

For information about configuring Bluetooth settings, see [Bluetooth Settings](#).

## Virtual Private Networks (VPN)

From your phone, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.



### Prepare Your Phone for VPN Connection

Depending on the type of VPN, you may be required to enter your login credentials or install security certificates before you can connect to your company's local network. You can get this information from your network administrator.

To connect to a VPN, you must have Mobile data enabled, or your phone must be connected to a Wi-Fi network. For information about setting up and using these connections on your phone, see [Mobile networks](#) and [Turn Wi-Fi On and Connect to a Wireless Network](#).

### Set a Screen Lock




Before setting up a VPN, you must set a screen lock to prevent access to your phone by unauthorized users. Pattern, PIN, or password screen locks provide sufficient security to set up trusted credential storage.

1. Press  and touch  > **Settings** > **My device** tab.
2. Touch **Lock screen** > **Screen lock**.
3. Choose a screen lock: Pattern, PIN, or Password.
4. Follow the prompts to configure the screen lock. For more information, see [Lock Screen](#).






## Add a VPN

The following procedures outline the method to use when adding a VPN connection.

1. Press  and touch  > **Settings** > **Connections** tab > **More networks** > **VPN**.
2. Touch  and then enter the information for the new VPN. The information you may need to enter includes **Name**, **Type**, **Server address**, and other information for your VPN network. Consult your network administrator for more details.
3. When finished, touch **Save**.

## Connect to a VPN

The following describes how to connect to a VPN.

1. Press  and touch  > **Settings** > **Connections** tab > **More networks** > **VPN**.
2. In the VPNs section, touch a VPN.
3. Follow the prompts to enter your login credentials and connect. When you are connected, the VPN connected icon appears in the Status bar.
4. Touch  > **Always-on VPN** to select a VPN to always stay connected.

 
## Memory Card

You can install an optional microSD™ memory card (not included), to add storage for images, videos, music, documents, and other files on your phone. This phone supports microSD™ and microSDHC™ cards of up to 64GB capacity.

## Install a Memory Card

Use the following procedure to install an optional memory card (not included) in your phone.

1. Remove the back cover from the phone. For more information, see “Remove the Back Cover” in [Set Up Your Phone](#).
2. To insert a MicroSD card, carefully slide the MicroSD card under the top metal plate into the MicroSD card socket as shown, until the card locks into place.

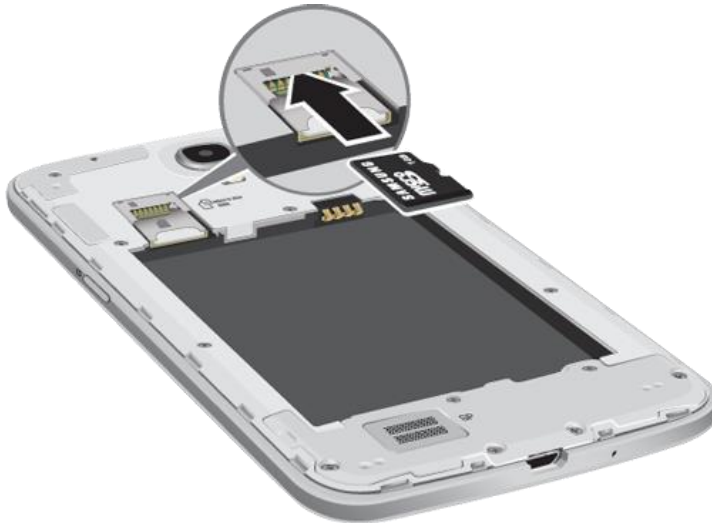



3. Replace the back cover. For more information, see “Replace the Back Cover” in [Set Up Your Phone](#).

**Important:** You can easily damage the memory card and card socket by improper installation. Please be careful when inserting, removing, or handling the memory card. Do not over-insert the card as this can damage the contact pins.

## *Remove a Memory Card*

Use the following procedure to remove an optional installed memory card (not included) from your phone.

**Important:** When you need to remove an optional installed memory card, you must first unmount the card to prevent corrupting the data stored on it or damaging the card.

1. Press  and touch  > **Settings** > **More** tab > **Storage**.
2. Touch **Unmount SD card**, then touch **OK**.
3. Remove the back cover from the phone. For more information, see “Remove the Back Cover” in [Set Up Your Phone](#).
4. Firmly press the memory card into the card socket to release it. The card should then pop partially out of the socket.
5. Remove the card from the socket.
6. Replace the back cover. For more information, see “Replace the Back Cover” in [Set Up Your Phone](#).

**Important:** You can easily damage the memory card and card socket by improper installation. Please be careful when inserting, removing, or handling the memory card. Do not over-insert the card as this can damage the contact pins.

## View Available Memory on microSD Card

Use the following procedure to view used and available memory on an optional memory card (not included).

- Press  and touch  > **Settings** > **More** tab > **Storage**.

## Format a Memory Card

Formatting permanently removes all data on an optional memory card (not included) and prepares it for use with your phone.

**Warning!** The formatting procedure erases all the data on an installed card, after which the files cannot be retrieved. To prevent the loss of important data, please check the contents before you format a card.

1. Press  and touch  > **Settings** > **More** tab > **Storage**.
2. Touch **Format SD card** > **Format SD card** > **Delete all**.

## Unmount a microSD Card

When you need to remove an optional memory card (not included), you must first unmount the card to prevent corrupting the data stored on it or damaging the card.

1. Press  and touch  > **Settings** > **More** tab > **Storage**.
2. Touch **Unmount SD card**, then touch **OK**.



## Transfer Files Between Your Phone and a Computer

Use Kies via Wi-Fi to wirelessly sync your computer with your phone. You can also sync files using a USB cable.

### Kies via Wi-Fi


Kies via Wi-Fi allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network. You can view and share call logs, videos, photos, music, bookmarks, ringtones, and even send SMS messages from your PC.

**Note:** To sync your phone to your PC it is highly recommended that you install Samsung Kies, which is available at [samsung.com/kies](http://samsung.com/kies) (for Windows/Mac).

1. Install and run Samsung Kies software on your PC.
2. Press  and touch  > **Settings** > **Connection** tab > **Kies via Wi-Fi**.
3. Follow the on-screen instructions.

## *Transfer Files Using a USB Cable*

You can use the supplied USB cable to connect your phone directly to your computer and transfer music, pictures, and other content files. For example, if you have a music album stored on your computer that you want to listen to on your phone with Music (app) or Google Play Music, just attach your phone to the computer and copy the files to the Music folder.

1. Connect your phone to your computer using the supplied USB cable.
  - Insert the smaller end of the cable to the USB charger/accessory jack at the bottom of the phone.
  - Insert the larger end of the cable into an available USB port on your computer.
2. Your phone will automatically detect the connection. When  appears in the Status bar, touch and slide downward from the top of the screen to display the Notification Panel.
3. Under Ongoing, the type of connection is shown as **Connected as a camera** or **Connected as a media device**.
4. To change the connection type, touch **Connected as [xxx]** in the Notification Panel and touch the desired option.
  - **Media device (MTP):** Used for most transfers. You can transfer files in Windows or on a Mac.
  - **Camera (PTP):** Used for transfers of photos using camera software on your computer.
5. Follow the prompts on your computer to begin transferring files.

# Camera and Video

---

You can use the camera or camcorder to take and share pictures and videos. Your phone comes with an 8 megapixel camera with an auto-focus feature that lets you capture sharp pictures and videos.

## Important!

Do not take videos of people without their permission.

 
Do not take videos in places where cameras are not allowed.


Do not take videos in places where you may interfere with another person's privacy.





## Take Pictures

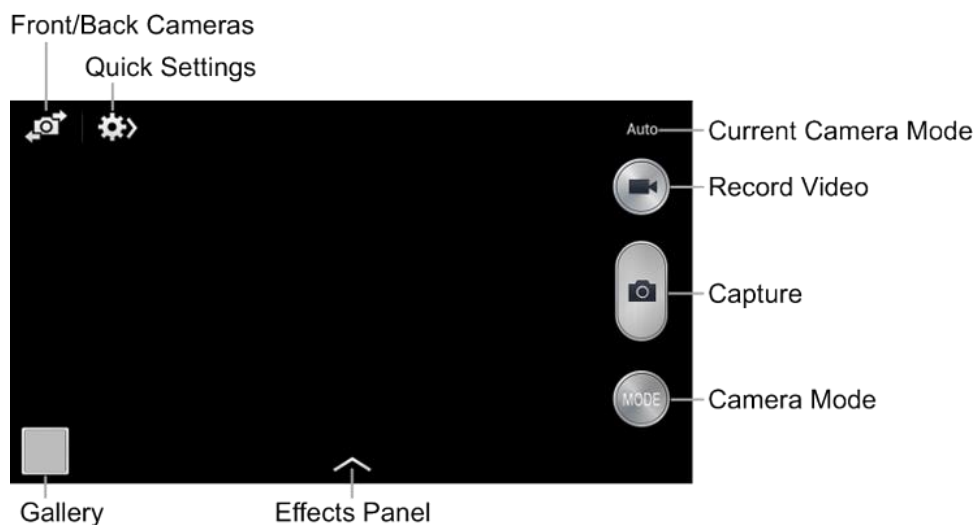Launch the Camera app to take pictures.

1. Press  and touch  **Apps** >  **Camera**.



2. Using the display as a viewfinder, compose your picture by aiming the lens at the subject. You can rotate the phone to any position, and the screen controls rotate to make taking pictures easy.
3. As you compose a picture, the camera automatically focuses the shot. You can also:
  - “Pinch” or “spread” the screen, or press the **Volume Key**, to zoom in or out.
  - Touch  to configure camera settings. For more information, see [Camera Settings](#).

- Touch  to select a different shooting mode. For more information, see [Camera Modes](#).
  - Touch  to add an effect to the picture.
4. To take a picture, touch .
  5. Touch  to view your pictures.

## Record Videos





Use the Camera to record video.

 
### Important!

Do not take videos of people without their permission.





Do not take videos in places where cameras are not allowed.

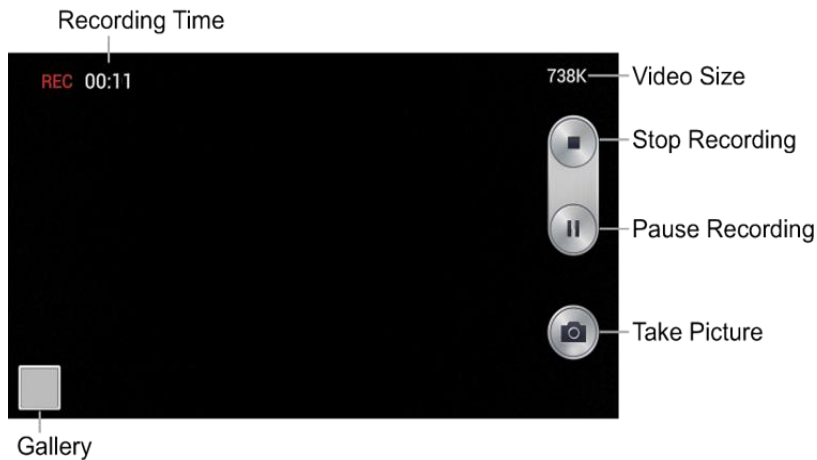Do not take videos in places where you may interfere with another person's privacy.

1. Press  and touch  **Apps** >  **Camera**.
2. Touch  to begin recording.






3. Using the display as a viewfinder, compose your video by aiming the lens at the subject. You can rotate the device to any position, and the screen controls rotate to make video recording easy.

4. While recording, you can use these options:
  - “Pinch” or “spread” the screen, or press the **Volume** key, to zoom in or out.
  - Touch  to temporarily stop recording.
  - Touch  to stop recording.
  - Touch  to take a screen capture.
5. Touch  to view your pictures.






## Camera Modes

Camera modes help optimize your photos, automatically adjusting the camera for use in various surroundings and lighting conditions.






1. Press  and touch  **Apps** >  **Camera**.
2. Touch the Camera Mode button to set the current camera mode:
  - **Auto:** Automatically adjust the camera to optimize color and brightness. This is the default setting.
  - **Beauty face:** Take portraits with enhanced facial features.
  - **Best photo:** Take multiple photos in a short time, and then choose the best photos among them.
  - **Continuous shot:** Take pictures continuously at a rate of 3 per second, up to a total of 20 pictures at a time.
  - **Best face:** Take multiple group shots at the same time and combine them to create one image using the best photo of each person.
  - **Sound & shot:** Enrich pictures by adding background sounds for a few seconds. The background sound is recorded for up to 9 seconds after taking the photo.
  - **Rich tone (HDR):** Take photos with richer colors and contrasts.
  - **Panorama:** Take wide panoramic photos.
  - **Sports:** Take clear photos of fast motion or action.
  - **Night:** Take photos in low-light conditions, without using the flash.

## Camera Settings

Quickly change Camera settings. Not all of the following options are available in both Camera and Video camera modes. Available options may also vary by Camera mode.

1. Press  and touch  **Apps** >  **Camera** > .
2. Touch  to configure options.
  - **Camera Settings**
    - **Photo size:** Choose a file size and resolution for the photo.
    - **Face detection:** Adjust the camera focus based on face detection technology.
    - **Metering:** Select a method for measuring light (back camera only).
    - **ISO:** Adjust how sensitive the camera's light meter is.
    - **Anti-shake:** Compensate for camera movement.
    - **Save as:** Assign rich tone usage to an image.
  - **Video Settings**
    - **Video size:** Choose a resolution for the video.
  - **General Settings**
    - **GPS tag:** Add GPS location information to the photo or video.
    - **Review:** Automatically review each photo or video after it is captured or recorded.
    - **Volume key:** Set the Volume key to zoom or to take photo/record video.
    - **Timer:** Set a delay to wait between touching the Camera button and taking a picture.
    - **White balance:** Choose a setting for the light source.
    - **Exposure value:** Set the default brightness level.
    - **Guidelines:** Enable or disable an on-screen grid to aid in photo composition.
    - **Flash:** Enable or disable the flash.
    - **Voice control:** Enables voice control of the camera.
    - **Contextual filename:** When enabled, the camera assigns a filename to the picture using GPS information.



- **Storage:** If an optional memory card is installed, choose the default storage location for pictures. By default all pictures are stored in the phone's internal memory.
- **Reset:** Set all camera settings to the defaults.
-  **Flash:** Enable the flash.
-  **Voice Control:** Take pictures using voice commands.
-  **Timer:** Set a delay between touching the **Capture** button and taking a picture or between touching the **Record** button and recording a video.
-  **Recording Mode:** Set a resolution for videos.
-  **Share:** Enable sharing options.






## Gallery


Using the Gallery application, you can view pictures and watch videos that you've taken with your phone's camera, downloaded, or copied to an optional memory card (not included).

For pictures, you can do basic editing such as rotating and cropping. You can also set a picture as wallpaper or a contact image, and share pictures with your friends.

While viewing pictures in the Gallery, scroll up the screen to view more albums. Simply touch an album to view the photos or videos in that album.









If you have pictures or videos stored on an optional memory card (not included), they will be displayed in the folders they are stored in, and folders are treated as albums. The folder names will be used as the album names. If you have downloaded any photos and videos, these will be placed in the **All downloads** album.

1. Press  and touch  **Apps** >  **Gallery**.
2. Browse files stored in your device's memory, or on an optional installed memory card (not included). From the main Gallery screen, you have these options:
  - Touch a picture or video to display it in full screen view.
  - Touch the menu in the toolbar to display files by **Albums**, **All**, **Time**, **Locations**, **People**, **Favorites**, or **Spiral**.
  - Touch  **Camera** to take a new picture.
  - Touch  **Menu** for options (options vary depending on the view):


- **Select album/Select item:** Depending on the view, touch albums or items to select them. After selection, you can touch  again for options you can use with the selected item.
- **Slideshow:** Choose options to create a slideshow for viewing your pictures and videos.
- **Sort by oldest/latest:** Sort items by date.
- **Content to display:** Select which content to display.
- **Scan for nearby devices:** Scan for Wi-Fi devices for sharing photos and videos.
- **Settings:** Configure Gallery settings.
- **Help:** Get help using Gallery.

## View Photos and Videos

Browse thumbnails of photos and videos. Touch a photo or video to view it in full screen.

1. Press  and touch  **Apps** >  **Gallery**.
2. Touch a thumbnail to view the photo or video. While viewing, you can use these options:
  -  **Change player:** Select a DLNA-enabled device.
  -  **Share via:** Choose an method for sharing the photo or video.
  -  **Camera:** Activate the Camera.
  -  **Trim:** Remove the beginning and ending frames of a video.
  -  **Delete:** Erase the photo or video.

**Note:** If no control icons are displayed on the screen in addition to the picture, touch anywhere on the screen to display them.

3. Touch  for more options:
  - **Edit:** Edit the photo.
  - **Favorite:** Mark the photo or video as a favorite.
  - **Slideshow:** View a slideshow of your photos and videos.
  - **Photo frame:** Add a decorative frame to the photo.
  - **Photo note:** Write a note on the 'back' of the photo.

- **Copy to clipboard:** Place the photo on the clipboard for pasting into other apps.
- **Print:** Print the photo to any Samsung printer (not included).
- **Rename:** Rename the photo or video.
- **Buddy photo share:** Share the photo with people tagged in the photo.
- **Rotate left:** Rotate the photo 90 degree to the left.
- **Rotate right:** Rotate the photo 90 degree to the right.
- **Crop:** Crop the photo.
- **Set as:** Set the photo as a Contact photo, or as wallpaper for the Home screen and Lock screen.
- **Details:** View file details about the photo or video.
- **Settings:** Configure Gallery settings:
  - **Accounts:** Manage your synced account(s).
  - **Sync only via Wi-Fi:** Limit mobile data usage by only syncing photos and videos when connected to a Wi-Fi network.
  - **Tag buddy:** Tag photos with information such as the weather, location, people in the photo, or date created.
  - **Face tag:** Scans each photo to detect people's faces, which you can then tag with their name.

## *Zoom In or Out on a Photo*

There are two ways you can zoom in or out of a photo.





- Touch the screen twice quickly to zoom in and then touch the screen twice quickly again to zoom out.

- or -

You can also use pinch and spread to zoom in or out. See “Pinch and Spread” under [Touchscreen Navigation](#).






## Working with Photos

You can touch and hold on a photo to open a selection menu and choose what to do with it. You rotate or crop it, add effects, and more.

1. Press  and touch  **Apps** >  **Gallery**.
2. Touch an image to display the picture.
3. Touch  > **Edit**.
4. To select an area of the image to edit, touch and hold the image and select an option:
  - **Selection mode:** Provide several selection methods, such as Select area, Inverse selection, Selection size, and Selection mode (Magnetic, Lasso, Brush, Round, and Square).
  - **Select all:** Select the entire image.
  - **Clipboard:** Copy the selected area to your phone's clipboard.
5. Use these controls to edit your picture:
  - **Rotate:** Rotate a photo in all 4 directions. You can also mirror image a photo.
  - **Crop:** Crop (cut-out) an area of a photo.
  - **Color:** Auto adjust color, Brightness, Contrast, Saturation, Adjust RGB, Temperature, Exposure, and Hue of a photo.
  - **Effects:** Add various effects to your photo.
  - **Portrait:** Apply various facial enhancement effects.
  - **Sticker:** Place various pre-created on-screen stickers atop your current image.
  - **Drawing:** Draw directly on your current picture by using either a brush/pen or eraser.
  - **Frame:** Place a pre-created border style atop your current image.




## Share Photos and Videos

The Gallery application lets you send photos and videos using Gmail or email. You can share photos on social networks and share videos on YouTube. You can also send them to another device or your computer using Bluetooth and Wi-Fi.

1. Press  and touch  **Apps** >  **Gallery**.
2. Touch the album that contains the photos or videos you want to share.
3. Touch  > **Select item**. Touch an item to select it, or touch the drop-down menu at the top and touch **Select all**.
4. Touch .
5. Touch a sharing method and follow the prompts to share your photos and videos.

## Video Player

The Video Player application plays video files stored on your device, or on an optional memory card (not included).

- Press  and touch  **Apps** >  **Video**.




# Tools and Calendar

---

Learn how to use many of your phone's productivity-enhancing features.

## Calculator

Your device comes with a built-in calculator.

1. Press  and touch  **Apps > Calculator** .
2. Enter numbers by touching the on-screen keyboard. Touch and hold **C** to clear all numbers.



## Calendar


Use Calendar to create and manage events, meetings, and appointments. Your Calendar helps organize your time and reminds you of important events. Depending on your synchronization settings, your device's Calendar stays in sync with your Calendar on the Web, Exchange ActiveSync calendar, and Outlook calendar.

### Add an Event to the Calendar

Add events to your Calendar to help you organize your time and remind you of important events.




**Note:** To synchronize calendar events among your Google and Corporate accounts, make sure they are being managed by your device. See [Accounts and Messaging](#) for more information.

1. Press  and touch  **Apps > 31 Calendar**.
2. Double-touch a day on the calendar, and then touch the Calendar field to assign the new event to an account, or save it to the device.
3. Touch **Tap to enter title** and enter a title for the event.
4. Touch **OK** to save the event now, or touch **Edit event details** to enter more information:
  - Select a **From/To** time for the event by touching the corresponding fields, and adjusting the month, day, and year.
  - If the event lasts all day, leave the **All day** check box checked, or touch to uncheck the box and enter a time for the event.
  - Select a recurrence cycle for the event by touching the **Repeat** field.
  - Select an alarm time by touching the **Reminder** field.

- Enter a location for the event in the **Location** field or touch  to select the location on a map.
  - Enter a description for the event in the **Description** field.
  - Touch **Memos** to create a new S Memo with the event, or link the event to an S memo.
  - Touch **Images** to add an image from the Gallery or take a new picture.
5. Touch **Save** to save the new event.





## View Events

The following procedure helps you view your calendar events.

1. Press  and touch  **Apps** >  **Calendar**.
2. To view a Calendar event farther out, touch either **Week** or **Month**.
3. Touch the day for which you would like to view events. (Your device lists events in chronological order.)
4. To display an event's details, touch it from the current screen.

## Erase Events

The following procedures show you how to erase your calendar events.




1. Press  and touch  **Apps** >  **Calendar**.
2. Open the calendar event details:
  - In **Week**, **Day**, **List**, or **Task Week** views, touch the calendar event you want to delete.
  - In **Month** view, touch the date where the calendar event occurs, and then touch the calendar event.
  - In **Year** view, touch the month in which the event is located.
3. Touch  > **Delete**.
4. In the Delete confirmation box, touch **OK**.

- or -

If the calendar event is recurring, select **Only this event**, **This & future events**, or **All events**, and touch **OK**.

## Clock





The Clock app offers features for keeping track of time and setting alarms.

1. Press  and touch  **Apps** >  **Clock** > **Alarm** tab.
2. Swipe your finger along the tabs at the top of the screen to view features. Tap a tab to use a feature:
  - **Alarm:** Set an alarm to ring at a specific time.
  - **World clock:** View the time of day or night in other parts of the world. World Clock displays time in hundreds of different cities, within all 24 time zones around the world.
  - **Stopwatch:** Measure intervals of time.
  - **Timer:** Set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).
  - **Desk clock:** Display a clock and calendar on the screen, with shortcuts to your favorite apps.




## Alarm

Use Alarm to remind yourself of important events.

### Create an Alarm

1. Press  and touch  **Apps** >  **Clock** > **Alarm** tab.
2. Touch , and then enter information for the alarm.
3. Touch **Save** to store the new alarm event.

### Delete an Alarm

1. Press  and touch  **Apps** >  **Clock** > **Alarm** tab.
2. Touch and hold an alarm, and then touch **Delete**.

## Downloads

The Downloads application allows you to manage files you download to your device.

- Press  and touch  **Apps** >  **Downloads**.

**Note:** Applications you download from Google Play Store are managed with Play Store, and do not display in Downloads.



## Dropbox




Dropbox automatically synchronizes content across all of your connected devices on your account. Update a file to your Dropbox on your computer, and it's automatically updated to the same folder on all of your other devices.

For more information, visit [Dropbox.com](https://Dropbox.com).

- Press  and touch  **Apps** >  **Dropbox**.

## Google Search

Use Google Search to search the Internet.

- Press  and touch  **Apps** >  **Google**.

## Google Settings

Use Google Settings to manage your Google apps and account settings.

- Press  and touch  **Apps** >  **Google Settings**.





## Help

Help provides online information to answer questions about your phone.

- Press  and touch  **Apps** >  **Help**.



## S Memo

S Memo allows you to create and share text memos.

1. Press  and touch  **Apps** >  **S Memo**.
2. Follow the prompts to use S Memo. For assistance, touch  > **Help**.

## My Files

Find, view, and manage folders and files, such as music files, photo files, video files, and so on, stored on your phone. If the file is associated with an application on your phone, you can launch the file in the application.




1. Press  and touch  **Apps** >  **My Files**.
2. Touch a folder or category to view its contents.

**Note:** Different folders may appear depending on how your phone is configured.

## Samsung Apps

Connect to Samsung Apps and make your smart device even smarter. Simply and easily download an abundance of applications to your phone such as games, news, reference, social networking, navigation, and more.

**Note:** This app requires a Samsung Account.

1. Press  and touch  **Apps** >  **Samsung Apps**.
2. Follow the on-screen download and installation instructions.

## S Translator




Easily translate words and phrases, either spoken or in text.

**Note:** This app requires a Samsung account.

- Press  and touch  **Apps** >  **S Translator**.




## S Voice

Activate a wide variety of functions on your phone using voice commands. You can ask questions (“Is it raining in Dallas?”) or give commands (“Show me where to find cheap gas.”).

1. Press  and touch  **Apps** >  **S Voice**.
2. Follow the prompts to set up and begin using S Voice.

## Voice Search

Perform a Google search by speaking your search criteria.

1. Press  and touch  **Apps** >  **Voice Search**.
2. Follow the prompts to use Voice Search.
3. To configure settings, see [Voice Search Settings](#).

# Settings

---

The following topics provide an overview of items you can change using your phone's Settings menus.

## Accessing Settings


There are two ways to access the Settings screen.

- Press  and touch  **Apps** >  **Settings**.

– or –

 
Press  and touch  > **Settings**.

– or –

From any screen, touch the top of the screen and swipe downward to display the Notification Panel, then touch  **Settings**.

## Settings Tabs

The Settings are divided into 4 main groups. When the Settings screen displays, the following four tabs are located at the top of the screen:

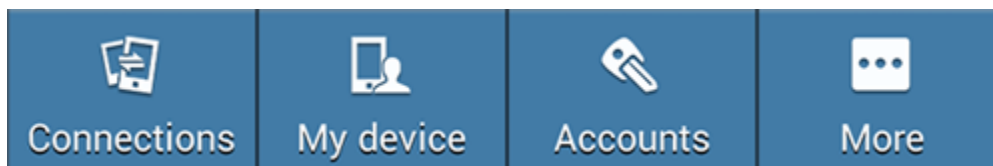




- **Connections:** Provides access settings related to the connection of your phone to external sources, such as Wi-Fi, Bluetooth, and Nearby devices.
- **My device:** Provides access to device configuration and customization features, such as Lock screen, Display, Sound, Power saving mode, and Accessibility.
- **Accounts:** Provides access to your accounts and access Backup and reset features.
- **More:** Provides access to the remaining settings not listed under the other three tabs, such as Location services, Security, Application manager, and About device.

## Wi-Fi Settings

Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your phone's Wi-Fi, you need access to a wireless access point or "hotspot."



For more information about using Wi-Fi, see [Wi-Fi](#).

1. Press  and then touch  > **Settings** > **Connections** tab.
2. Touch **OFF/ON** to turn Wi-Fi on, then touch **Wi-Fi**.
3. Touch  to configure these settings:
  - **Advanced:**
    - **Network notification:** Alert you when a new Wi-Fi network is available.
    - **Passpoint:** Connect to passpoint-enabled Wi-Fi Access Points automatically.
    - **Keep Wi-Fi on during sleep:** Specify when to switch from Wi-Fi to mobile data for data communications when the device goes to sleep (when the backlight goes out). This setting can affect data usage, since the data connection will remain active even when the device screen is off.
    - **Auto network switch:** Auto switch between Wi-Fi networks and mobile networks.
    - **Wi-Fi timer:** Automatically connect or disconnect from a Wi-Fi network. Touch **Wi-Fi time** to set the **Starting time** and **Ending time**.
    - **MAC address:** View the phone's MAC address, needed for connecting to some secured networks (not configurable).
    - **IP address:** View the phone's IP address (not configurable).
  - **WPS push button:** Set up a connection to a WPS (Wi-Fi Protected Setup) router or other equipment.
  - **WPN PIN entry:** View the PIN used by your phone to set up a PIN-secured connection to a Wi-Fi router or other equipment (not configurable).
  - **Help:** Get help using Wi-Fi.

## Hotspot

Use your phone as an Internet Access Point (AP) using Hotspot. This allows other devices (maximum of 8) to connect to the AP via a Wi-Fi network—giving the connected devices access to the Internet.




### Connect a Device

1. Press  and then touch  > **Settings** > **Connections** tab > **Hotspot**.
2. Touch **OFF/ON** to enable Hotspot.
3. On the target device, activate Wi-Fi. Then scan for Wi-Fi hotspots. Select the name of your phone to connect.
4. On your phone, follow the prompts to connect to the targeted device.

## Bluetooth Settings

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices.




For more information about using Bluetooth, see [Bluetooth](#).

1. Press  and then touch  > **Settings** > **Connections** tab.
2. Touch **OFF/ON** to turn Bluetooth on, then touch **Bluetooth**.
3. Touch  to configure these settings:
  - **Visible timeout:** Set the length of time your phone is visible to other devices when you turn on visibility.
  - **Received files:** View files transferred to your phone via Bluetooth.
  - **Help:** View information about using Bluetooth.

# Data Usage Settings

Monitor data usage, and control your phone's connection to mobile data services.

**Note:** Data is measured by your phone. Your service provider may account for data usage differently.

1. Press  and then touch  > **Settings** > **Connections** tab.
2. Touch **Data usage** to configure options:
  - **Mobile data:** Enable or disable Mobile data.
  - **Limit mobile data usage:** The mobile data connection will be disabled when the specified limit is reached. After enabling the setting, drag the red limit line on the graph below to set the data usage limit.
  - **Alert me about data usage:** The phone will alert you when mobile data usage reaches the warning limit you set. After enabling the setting, drag the orange warning line on the graph below to set the data usage warning limit.
  - **Data usage cycle:** Touch the menu, and then choose a time period for data usage. Data usage for the period displays on the graph, along with usage by application below.
3. Touch  to set other options:
  - **Data roaming:** Allow your phone to use mobile data when roaming. Additional charges may apply. See your service plan for details.
  - **Restrict background data:** Prevent connecting to the network in the background, for synchronization or other services.
  - **Auto sync data:** Synchronize with accounts automatically, at any time.
  - **Show Wi-Fi usage:** Display data usage while connected to Wi-Fi.
  - **Mobile hotspots:** Select Wi-Fi networks that are mobile hotspots. You can restrict apps from using these networks, and you can configure apps to warn you before using these networks for large downloads.


## More Networks



The **More networks** menu provides additional wireless and network options.

### Airplane Mode

Enabling Airplane mode turns off calling, messaging, and data network features. It also turns off other connectivity features, such as Wi-Fi and Bluetooth.



While in airplane mode, you can use other features of your device, such as playing music, watching videos, or other applications.

To use Wi-Fi and Bluetooth when Airplane mode is enabled, turn them on in Settings or in the Notification Panel. While in Airplane mode, the  icon displays in the Status bar.

1. Press  and then touch  > **Settings** > **Connections** tab > **More networks**.
2. Touch the check box next to **Airplane mode** to enable or disable the option.



### Mobile Networks

Control your device's access to networks, including mobile data service.

1. Press  and then touch  > **Settings** > **Connections** tab > **More networks** > **Mobile networks**.
2. Configure options:
  - **Mobile data:** Turn on data access over mobile network.
  - **Network mode:** Choose a preferred network mode.
  - **Connections optimizer:** Manage and enhance your data experience by finding and connecting to remembered Wi-Fi networks on your device, and, if applicable, to 4G network service.
  - **Network operators:** Select a network operator.

### Tethering

Share your phone's mobile data connection via USB or Bluetooth.



1. Press  and then touch  > **Settings** > **Connections** tab > **More networks** > **Tethering**.
2. Configure options:
  - Touch **USB tethering** to share your mobile data connection via USB.
  - Touch **Bluetooth tethering** to share your mobile data connection via Bluetooth.
  - Touch **Help** for more information about tethering.

## VPN

Set up and manage Virtual Private Networks (VPN).



**Note:** VPN settings include storage of login credentials on your device. You must configure a screen unlock pattern, PIN, or password before setting up a VPN.

For more information about setting up and using a VPN, see [Virtual Private Networks \(VPN\)](#)

1. Press  and then touch  > **Settings** > **Connections** tab > **More networks**.
2. Touch **VPN**.

## Roaming

Set options for roaming, network, and APNs.

1. Press  and then touch  > **Settings** > **Connections** tab > **More networks**.
2. Touch **Roaming** for options:
  - Touch **Roaming network** to select a roaming network (Home or Automatic).
  - Touch **Roaming settings** to enable data roaming:

**Note:** Additional charges may apply. See your service plan for details.

- **Domestic CDMA** (Voice and Data)
- **International CDMA** (Voice and Data)
- **GSM networks** (Data)
- Touch **Roaming guard** to restrict data roaming (domestic and international).

## NFC

Use NFC (Near Field Communication) to share information between your device and another NFC device by touching the devices together, typically back-to-back.

NFC is used with S Beam and Android Beam, and must be turned on to use these features.

**Note:** Touch  > **Help** for information about using NFC.

## Turn NFC On or Off



Use NFC (Near Field Communication) to share information between your device and another NFC device or NFC tag, by touching the devices together, typically back-to-back.

1. Press  and touch  > **Settings** > **Connections** tab.
2. Touch **OFF/ON** to turn **NFC** to on or off.



## Android Beam

When Android Beam is activated, you can beam app content to another NFC-capable device by holding the devices close together. You can beam browser pages, YouTube videos, contacts, and more. The app determines what kind of data is beamed.

1. Press  and touch  > **Settings** > **Connections** tab > **NFC**.
2. Touch **OFF/ON** to turn **NFC** on.
3. Touch **OFF/ON** to turn **Android Beam** on.



## S Beam

Share more and share it faster with S Beam. From photos to documents, large video files to maps, you can share almost anything instantly with one touch, simply by placing your devices back-to-back.

S Beam uses your device's NFC (Near Field Communication) feature to send, or "beam," content to other NFC devices.

### Turn S Beam On or Off

When S Beam is turned On, you can send or receive data by touching your device to another NFC-capable device.



1. Press  and touch  > **Settings** > **Connections** tab.
2. Touch **OFF/ON** to turn **S Beam** on.
3. Touch **S Beam** to learn more about using S Beam to transfer files.

## Nearby Devices

Share files with devices using DLNA (Digital Living Network Alliance) standards, over Wi-Fi.

To use Nearby devices, you must connect to the same Wi-Fi network as the devices you wish to share with, and the other devices must support DLNA.

**Note:** Use care when enabling file sharing. When enabled, other devices can access data on your device.



1. Press  and touch  > **Settings** > **Connections** tab.
2. Touch **Nearby devices** to configure these options:
  - Touch **File sharing** to enable or disable file sharing.
  - **Shared contents:** Allow sharing of Videos, Photos, or Music.

- **Allowed devices list:** View and manage a list of devices allowed to connect to your phone.
- **Not-allowed devices list:** View and manage a list of devices restricted from connecting to your phone.
- **Download to:** Choose a location to save downloaded content, either Device or an optional SD card (not included).
- **Upload from other devices:** Choose how to handle incoming files from other devices. Options are Always accept, Always ask, or Always reject.

## Screen Mirroring

With Screen mirroring, you can share media files on your phone's screen with an HDMI device (such as an HDMI TV) using an optional AllShare Cast accessory (not included).

### Turn Screen Mirroring On or Off

1. Press  and touch  > **Settings** > **Connections** tab.
2. Touch **Screen mirroring**, and then touch the **OFF/ON** switch to turn Screen mirroring on or off.

**Note:** Touch  > **Help** to find instructions for using Screen mirroring to connect to a device.

## Kies via Wi-Fi



Kies via Wi-Fi allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network. You can view and share call logs, videos, photos, music, bookmarks, ringtones, and even send SMS messages from your PC.

For more information on using Kies via Wi-Fi, see [Kies via Wi-Fi](#).

- Press  and touch  > **Settings** > **Connections** tab > **Kies via Wi-Fi**.

## Lock Screen

Configure settings for locking the screen to improve security.

1. Press  and then touch  > **Settings** > **My Device** tab > **Lock screen** > **Screen lock**.
2. Touch **Screen lock** and follow the instructions to select a screen lock. Then configure the options for that screen lock.

Available screen locks are Swipe, Face unlock, Face and voice, Pattern, PIN, Password, and None.

## Swipe

Unlock the phone by swiping your finger across the screen. This is the default screen lock, and offers no security.

Options are:

- **Multiple widgets:** Display multiple widgets on your Lock screen.
- **Lock screen widgets:** Customize your clock and personal message.
- **Shortcuts:** Add app shortcuts to the lock screen.
- **Unlock effect:** Show a ripple effect on the lock screen when you slide your finger over the screen.
- **Help text:** Show help information on the Lock screen.
- **Wake up in lock screen:** Wake up the screen by speaking a command.
- **Set wake-up command:** Set a command to wake up the screen.

## Face Unlock

Unlock the phone by looking at the screen. This option offers low security, because someone who looks similar to you could unlock your phone.

Options are:

- **Lock screen widgets:** Customize your clock and personal message.
- **Improve facial recognition:** Have your face captured in different conditions.
- **Presence check:** Require a blink to unlock your device.
- **Make pattern visible:** Display the security pattern.
- **Lock automatically:** Screen will automatically lock 5 seconds after the screen turns off.
- **Lock instantly with power key:** Instantly lock the device by pressing the **Power/Lock Key**.

## Face and Voice

Unlock the phone by looking at the screen and speaking. This option offers low security, because someone who looks and/or sounds similar to you could unlock your phone.

Options are:

- **Lock screen widgets:** Customize your clock and personal message.
- **Improve facial recognition:** Have your face captured in different conditions.

- **Presence check:** Require a blink to unlock your device.
- **Make pattern visible:** Display the security pattern.
- **Lock automatically:** Screen will automatically lock 5 seconds after the screen turns off.
- **Lock instantly with power key:** Instantly lock the device by pressing the **Power** key.

## *Pattern*

Draw a pattern on the screen to unlock the phone.

- **Lock screen widgets:** Customize your clock and personal message.
- **Make pattern visible:** Display the security pattern.
- **Lock automatically:** Screen will automatically lock 5 seconds after the screen turns off.
- **Lock instantly with power key:** Instantly lock the device by pressing the **Power** key.

## *PIN*

Enter a numeric PIN (Personal Identification Number) to unlock the phone.

Options are:

- **Lock screen widgets:** Customize your clock and personal message.
- **Lock automatically:** Screen will automatically lock 5 seconds after the screen turns off.
- **Lock instantly with power key:** Instantly lock the device by pressing the **Power** key.

## *Password*

Enter an alphanumeric password to unlock the phone.

Options are:

- **Lock screen widgets:** Customize your clock and personal message.
- **Lock automatically:** Screen will automatically lock 5 seconds after the screen turns off.
- **Lock instantly with power key:** Instantly lock the device by pressing the **Power** key.

## *None*



Disable all screen lock settings.

# Display Settings

Configure settings for your phone's display.

 

## Wallpaper

Customize the background of the Home and Lock screens. Choose from preloaded wallpapers, or select a photo you have downloaded or taken with the Camera.

1. Press  and then touch  > **Settings** > **My Device** tab > **Display** > **Wallpaper**.
2. Touch a screen to customize: **Home screen**, **Lock screen**, or **Home and lock screens**.
3. Choose a source for wallpaper:
  - **Gallery**: Choose a picture from Gallery. Follow the prompts to crop the picture and save it as wallpaper.
  - **Live wallpapers**: Choose a moving scene for the background (Home screen only).
  - **Travel wallpaper**: Display recommended destinations on your Lock screen (Lock screen only).
  - **Wallpapers**: Choose an image from the Wallpapers gallery.

## Notification Panel

Customize the Notification panel.

1. Press  and then touch  > **Settings** > **My Device** tab > **Display** > **Notification panel**.
2. Touch the check box next to **Brightness adjustment** to allow adjusting the screen brightness via the Notification panel.
3. To set the Quick setting buttons, touch and drag buttons from the Available buttons area to the Notification Panel area. Touch **Reset** to revert back to the default layout.

## Multi Window



Multi window allows you to use two apps on the same screen, in separate, resizable windows.

For more information on using Multi window, see [Multi Window](#).

1. Press  and then touch  > **Settings** > **My Device** tab > **Display**.
2. Touch the check box next to **Multi window** to enable or disable the option.



## Screen Mode

Adjust the color range, saturation, and sharpness of your screen.

1. Press  and then touch  > **Settings** > **My Device** tab > **Display**.
2. Touch **Screen mode** for options:
  - **Adapt display:** Let the phone automatically optimize the color range, situation, and sharpness of your screen for the following apps: Gallery, Camera, Internet, Samsung Video, Samsung WatchON, Samsung Books, and Google Play Books. (This mode does not apply to third-party applications.)
  - **Dynamic:** Enhance the brightness and color range of the screen.
  - **Standard:** Use a balanced color range, saturation, and sharpness of the screen .
  - **Movie:** Soften the color situation of the screen.



## Brightness

Adjust your screen's brightness to suit your surroundings.

1. Press  and then touch  > **Settings** > **My Device** tab > **Display**.
2. Touch **Brightness** to configure options:
  - Touch the check box next to **Automatic brightness** to allow the device to adjust brightness automatically.
  - To set a custom brightness level, clear the Automatic brightness checkmark and then touch and drag the **Brightness level** slider.



## Auto Rotate Screen

Switch the display orientation automatically when you rotate the phone.

1. Press  and then touch  > **Settings** > **My Device** tab > **Display**.
2. Touch **Auto rotate screen** to switch the display orientation automatically when you rotate the phone.






## Screen Timeout

Screen timeout lets you select how long the display screen remains lit after you press any key.

1. Press  and then touch  > **Settings** > **Display**.
2. Touch **Screen timeout**, and then touch a time setting.



## Daydream

Use Daydream to control what the screen displays when the device is docked or charging. Choose to display Colors, Flipboard, or photos.

1. Press  and then touch  > **Settings** > **My Device** tab > **Display**.
2. Touch **OFF/ON** to turn Daydream on.
3. Touch **Daydream** for options:
  - **Colors**: Display colorful screens.
  - **Flipboard**: Display content from Flipboard. Touch  to choose options.
  - **Photo Table**: Display pictures in a photo table. Touch  to choose pictures.
  - **Photo frame**: Display pictures in a photo frame. Touch  to choose pictures.
4. Touch **Start now** to enter Daydream mode.
5. Touch **Select dream time** to set when Daydream mode occurs. Select from While docked, While charging, or All.

## Font Style



You can set the font for all text that displays on the screen.

1. Press  and then touch  > **Settings** > **My Device** tab > **Display**.
2. Touch **Font style**, and then choose a font.

**Tip:** To acquire additional font options, touch **Get fonts online** to access new fonts in the Google Play Store.



## Font Size

This option allows you to select the size of fonts for your device's screens.

1. Press  and then touch  > **Settings** > **My Device** tab > **Display**.
2. Touch **Font size**, and then choose a size.



## Increase Legibility

Increase legibility and clarity of text.

1. Press  and then touch  > **Settings** > **My Device** tab > **Display**.
2. Touch **Increase legibility** to enable the option.

## *Touch Key Light Duration*

Adjust the delay before the Touch key light automatically turns off.

1. Press  and then touch  > **Settings** > **My Device** tab > **Display**.
2. Touch **Touch Key Light Duration** to choose a duration time.


## *Show Battery Percentage*

Display the percentage of remaining battery power beside the battery icon in the Status bar.

1. Press  and then touch  > **Settings** > **My Device** tab > **Display**.
2. Touch **Show battery percentage** to enable the option.



## *Edit After Screen Capture*

Edit a screen immediately after taking a screen capture.

1. Press  and then touch  > **Settings** > **My Device** tab > **Display**.
2. Touch **Edit after screen capture** to enable the option.

## *LED Indicator*

The LED indicator on the front of the phone displays when the phone is locked to notify you of status changes and events. Use LED indicator settings to configure how the LED functions.

1. Press  and touch  > **Settings** > **My Device** tab.
2. Touch **LED indicator** for options:
  - **Charging:** When enabled, the LED glows red during charging, and green when the battery is fully charged when the screen is off.
  - **Low battery:** When enabled, the LED blinks red to indicate low battery charge when the screen is off.
  - **Notifications:** When enabled, the LED blinks blue to show that you have missed calls, new messages, or application events when the screen is off.
  - **Voice recording:** When enabled, the LED blinks blue when recording when the screen is off.





## Sound

Use Sound settings to control your device's audio, from ringtones and alerts to touch tones and notifications.

### Volume



Set the system volume level, and set default volume for call ringtones, notifications, and media playback.

**Note:** You can also set System volume from the Home screen by pressing the **Volume Key**.

1. Press  and touch  > **Settings** > **My Device** tab > **Sound**.
2. Touch **Volume** to set volume levels. Drag the sliders to set the default volume for:
  - **Music, video, games, and other media**
  - **Ringtone**
  - **Notifications**
  - **System**



### Vibration Intensity

Select how intense the vibration is for different activities.

1. Press  and touch  > **Settings** > **My Device** tab > **Sound** > **Vibration intensity**.
2. Touch and drag the sliders to adjust the Vibration intensity for Incoming call, Notification, and Haptic feedback.



### Ringtones

Choose a ringtone for incoming calls.

1. Press  and touch  > **Settings** > **My Device** tab > **Sound**.
2. Touch **Ringtones** to choose a ringtone:
  - Touch a ringtone to select it. As you touch a ringtone, a sample plays.
  - Touch **Add** to choose a music track from Google Music, a sound file from Dropbox, or use Sound picker to choose a song from Music player.



## *Vibrations*

Choose vibrations to play for notifications, such as for incoming calls, new messages, and event reminders.

1. Press  and touch  > **Settings** > **My Device** tab > **Sound**.
2. Touch **Vibrations** to choose a notification tone.
3. Touch a vibration to play a sample and select the sound.
4. Touch **Create** to create your own custom vibration pattern.



## *Default Notification Sound*

Choose a sound for notifications, such as for new messages and event reminders.

1. Press  and touch  > **Settings** > **My Device** tab > **Sound**.
2. Touch **Default notification sound** to choose a notification tone.
3. Touch a sound to play a sample and select the sound.



## *Vibrate When Ringing*

Set a vibration to occur when receiving calls.

1. Press  and touch  > **Settings** > **My Device** tab > **Sound**.
2. Touch **Vibrate when ringing** to enable the option.



## *Dialing Keypad Tone*

Set tones to sound when you touch keys on the phone keypad.

1. Press  and touch  > **Settings** > **My Device** tab > **Sound**.
2. Touch **Dialing keypad tone** to enable the option.



## *Touch Sounds*

Set tones to sound when you touch or touch the screen to make selections.

1. Press  and touch  > **Settings** > **My Device** tab > **Sound**.
2. Touch **Touch sounds** to enable the option.



## *Screen Lock Sound*

Set tones to sound when you touch the screen to lock or unlock it.

1. Press  and touch  > **Settings** > **My Device** tab > **Sound**.
2. Touch **Screen lock sound** to enable the option.



## Haptic Feedback

Vibrate when soft keys are pressed and on certain UI interactions.

1. Press  and touch  > **Settings** > **My Device** tab > **Sound**.
2. Touch **Haptic feedback** to enable the option.

## Emergency Tone



Set a tone to sound, or have your phone vibrate, periodically during an emergency call.

1. Press  and touch  > **Settings** > **My Device** tab > **Sound**.
2. Touch **Emergency tone** to select a tone:
  - **Off**: No tone or vibration will occur during emergency calls.
  - **Alert**: Play a tone during emergency calls.
  - **Vibrate**: Set a vibration to occur during emergency calls.

## Adapt Sound

Find the best sound for you, to use during calls, and for media playback.

**Note:** This setting uses earphones to ensure the best sound during setup. You must connect the optional earphones to the phone to configure this setting.

1. Press  and touch  > **Settings** > **My Device** tab > **Sound** > **Adapt Sound**.
2. Touch **Start**, and then follow the prompts.

## Home Screen Mode

Your phone offers two Home screen modes.

- **Standard mode** provides a conventional layout for apps and widgets on the Home screen.
- **Easy mode** provides an easier experience for the first-time smartphone user.

You can change the Home screen mode at any time.



1. Press  and touch  > **Settings** > **My Device** tab.
2. Touch **Home screen mode**, and then choose a mode.

## Call Settings

Configure options for calling with your phone.



### Set Up Call Rejection Messages

Create and manage text messages to send to callers when rejecting incoming calls. Messages you create here are available from the incoming call screen when you use the **Reject with message** option.

1. Press  and touch  > **Settings** > **My Device** tab > **Call**.
2. Touch **Set up call rejection messages** to manage messages:
  - To create new messages, touch **Create**, then follow the prompts.
  - To modify an existing message, touch the message, then edit the text.



### Answering/Ending Calls

Manage settings for answering and ending calls.

1. Press  and touch  > **Settings** > **My Device** tab > **Call**.
2. Touch **Answering/ending calls** to configure these options:
  - **The home key answers calls:** Answer incoming calls by pressing the Home key.
  - **Voice control:** Answer calls by speaking commands. Touch the check box to turn Voice control on, then touch **Voice control**. Touch the check box to turn **Incoming calls** on. When enabled, you can answer or reject calls with the voice commands “Answer” and “Reject”. When you answer a call with a voice command, the Speaker will automatically turn on for hands-free calls.
  - **The power key ends calls:** End calls by pressing the Power key. In this case, pressing the Power key during a call will not lock the screen.



### Turn Off Screen During Calls

Turn the screen off during phone calls, and use the proximity sensor on the front of the phone to turn the screen back on when the phone is moved away from your ear.

1. Press  and touch  > **Settings** > **My Device** tab > **Call**.
2. Touch **Turn off screen during calls** to enable the option.



## Call Alerts

Set options for sounds and vibrations to occur during calls.

1. Press  and touch  > **Settings** > **My Device** tab > **Call**.
2. Touch **Call alerts** to configure settings:
  - **Vibrate on connection to network:** Vibrate the phone when a call connects to the network.
  - **Call-end vibration:** Vibrate the phone when the call ends.
  - **Call connect tone:** Play a tone when a call is connected.
  - **Minute minder:** Beep twice a minute during a call.
  - **Call end tone:** Play a tone when the other caller ends the call.
  - **Alerts during calls:** Play notifications for alarms and new messages during calls.



## Call Accessories

Configure options for using a headset.

1. Press  and touch  > **Settings** > **My Device** tab > **Call**.
2. Touch **Call accessories** for options:
  - **Automatic answering:** Answer incoming calls automatically after a delay when a headset is connected.
  - **Automatic answering timer:** Set a time period to delay before automatically answering an incoming call when a headset is connected. Touch to choose **2 seconds**, **5 seconds**, or **10 seconds**.
  - **Outgoing call conditions:** When the device is paired with a Bluetooth headset, enable calls to be made even if the phone is locked. Touch **Even when device locked**, or **Only when device unlocked**.



## Ringtones and Keypad Tones

Choose tones and vibrations to play for incoming calls and keypad touches.

1. Press  and touch  > **Settings** > **My Device** tab > **Call** > **Ringtones and keypad tones**.
2. Configure settings:
  - **Ringtones**: Set a ringtone for incoming calls.
  - **Vibrations**: Set a vibration pattern for incoming calls when the Vibrate when ringing option is enabled. Touch **Create** to create a custom pattern.
  - **Vibrate when ringing**: Set a vibration for incoming calls. (The vibration pattern is selected with the previous Vibrations setting).
  - **Keypad tones**: Set phone to play tones when touching the keypad.


## Personalize Call Sound

Choose options for call audio, in cases where you might need the sound softer or more clear, or optimized for your right or left ear.

1. Press  and touch  > **Settings** > **My Device** tab > **Call** > **Personalize call sound**.
2. Touch **In-call sound EQ** to optimize the sound during calls. Options are **Off**, **Soft sound**, **Clear sound**, **adapt sound left**, or **adapt sound right**.
3. Touch **Adapt sound** and then follow the onscreen prompts to customize the best call sound for you.

## Noise Reduction

Suppress background noise from your environment during calls.

1. Press  and touch  > **Settings** > **My Device** tab > **Call**.
2. Touch **Noise reduction** to enable the option.

## Increase Volume in Pocket

Increases the ringtone volume when the phone is in a pocket or a bag.

1. Press  and touch  > **Settings** > **My Device** tab > **Call**.
2. Touch **Increase volume in pocket** to enable the option.



## US Dialing

Replace “+” with the international access code for your location.

1. Press  and touch  > **Settings** > **My Device** tab > **Call**.
2. Touch **US dialing** to enable the option.

## International Dialing



Use the International dialing code to replace “+”. The *US dialing* setting must be disabled to access the International dialing code.

1. Press  and touch  > **Settings** > **My Device** tab > **Call**.
2. Touch **International dialing** and use the keypad to enter the international dialing code.

## TTY Mode

A TTY (teletypewriter, also known as a TDD or Text Telephone) is a telecommunications phone that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY phones. Please check with the manufacturer of your TTY phone to ensure that it supports digital wireless transmission. Your phone and TTY phone will connect using a special cable that plugs into your phone’s headset jack. If this cable was not provided with your TTY phone, contact your TTY phone manufacturer to purchase the connector cable.

1. Press  and touch  > **Settings** > **My Device** tab > **Call** > **TTY mode**.
2. To choose a mode, touch **TTY Off**, **TTY Full**, **TTY HCO**, or **TTY VCO**.



## Hearing Aids

Set the phone to be hearing aid compatible.

1. Press  and touch  > **Settings** > **My Device** tab > **Call**.
2. Touch **Hearing aids**.


## DTMF Tones

Set the length of Dual-tone Multi-frequency (DTMF) tones which play when you use the keypad during a call—such as when navigating menus.

1. Press  and touch  > **Settings** > **My Device** tab > **Call** > **DTMF tones**.
2. To choose a tone length, touch **Normal** or **Long**.



## *Voicemail Settings*

Set options for voicemail.

1. Press  and touch  > **Settings** > **My Device** tab > **Call**.
2. Touch **Voicemail settings** to configure options for voicemail.



## *Voice Privacy*

Improve the security of voice calls.

1. Press  and touch  > **Settings** > **My Device** tab > **Call**.
2. Touch **Voice privacy** to enable the option.

## *Blocking Mode*



Block notifications for selected features. You can block notifications by feature or contact, and block all the time or only during a specific time period.

1. Press  and touch  > **Settings** > **My Device** tab.
2. Touch **OFF/ON** to turn Blocking mode on, then touch **Blocking mode** for options:
  - **Block incoming calls:** Notifications for incoming calls will not display.
  - **Turn off notifications:** Notifications for new messages will not display.
  - **Turn off alarm and timer:** Notifications for alarms and timers will not display.
  - **Turn off LED indicator:** The LED indicator will not light for notifications, even when the screen is off.
  - **Always:** Block notifications at all times.
  - To set a specific time period to block notifications each day, disable the **Always** option, and then set a starting time (**From** field) and ending time (**To** field).
  - **Allowed contacts:**
    - **None:** Block all notifications, from any contact.
    - **All contacts:** Allow notifications from any contact.
    - **Favorites:** Only allow notifications from contacts marked as favorites.
    - **Custom:** Allow notifications from contacts you specify.
  - **Allowed contact list:** Edit a custom list of allowed contacts.





## Driving Mode

Set alarm and scheduled alarm information to be read aloud.

1. Press  and touch  > **Settings** > **My Device** tab.
2. Touch **OFF/ON** to turn Driving mode on, then touch **Driving mode** for options:
  - **Incoming call:** Read callers' information aloud.
  - **Message:** Read senders' information when new messages arrive.
  - **Alarm:** Read alarm information aloud.
  - **Schedule:** Read scheduled alarm information aloud.

## Power Saving Mode

Configure Power saving mode settings to conserve battery power.

1. Press  and touch  > **Settings** > **My Device** tab.
2. Touch **OFF/ON** to turn Power saving mode on, then touch **Power saving mode** to set options:
  - **CPU power saving:** Disable the maximum performance of the device's CPU (Central Processing Unit).
  - **Screen power saving:** Reduce the frame refresh rate and brightness level.
  - **Turn off haptic feedback:** Do not use haptic feedback.

**Note:** Touch **Learn about Power saving mode** to view information about these settings.

## Power Saving Tips



Active applications, light levels, Bluetooth usage, and GPS functionality all act to drain your battery. The following is a list of helpful tips that can help conserve your battery power:

- Reduce your backlight time.
- Turn Bluetooth off when not in use.
- Turn Wi-Fi off when not in use.
- Turn 4G data service off when not in use.
- Turn off GPS location services when not needed. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.

- Do not wait until your battery is completely depleted before charging your device. Repeating this process of a complete discharge and recharge can over time reduce the storage capacity of any battery.
- Turn off Automatic application sync.
- Check the Battery settings to review features or functions that have been consuming your battery power.
- Check the Running Services and close any unnecessary applications.
- Animated wallpapers use an increased amount of power and memory. Change your Live Wallpaper to a non-animated Wallpaper gallery or Gallery image.



## Accessory Settings


Configure your phone's behavior when it is connected to an optional dock (not included).

1. Press  and touch  > **Settings** > **My Device** tab.
2. Touch **Accessory** for options:
  - **Dock sound:** Play a sound when you insert and remove the phone from the dock.
  - **Audio output mode:** Play audio through the dock speakers when the phone is docked.
  - **Desk home screen display:** Display the desk home screen when the device is docked.
  - **Automatic unlock:** Flip the S View cover open to unlock the screen when the secure lock is disabled and the phone is docked.
  - **Audio output:** Select the type of audio output when using HDMI.

## Accessibility

Your phone offers features to make using the phone easier for those with certain physical disabilities. Use Accessibility settings to configure these features.



1. Press  and touch  > **Settings** > **My Device** tab.
2. Touch **Accessibility** to configure options:
  - **Auto rotate screen:** Enable automatic rotation of the screen when you rotate the phone.
  - **Screen timeout:** Set a period of time for the screen to remain lit—after which it will dim and lock.

- **Lock automatically:** Lock the screen in 5 seconds after screen automatically turns off. (This option appears only when a screen lock is enabled.)
- **Speak passwords:** Read aloud password information.
- **Answering/ending calls:** Options for answering and ending calls.
  - **The home key answers calls.** Press the  **Home Key** to answer calls.
  - **Answer calls by tapping:** Touch the accept call button on the incoming call screen.
  - **Voice control:** Answer calls using voice commands.
  - **The power key end calls:** Press the **Power Key** to end calls.
- **Show shortcut:** Display a shortcut to Accessibility settings on the Device options menu. (The Device options menu displays when you press and hold the **Power/Lock Key**.)
- **Manage accessibility:** Choose settings for exporting, updating, and sharing the accessibility settings as a file.
  - **Export:** Save the accessibility settings as a file.
  - **Update:** Update your accessibility settings by importing the saved file.
  - **Share via:** Share the accessibility settings file.
  - **Android Beam:** Send the accessibility settings file via NFC.
- **TalkBack:** Activate the TalkBack feature and configure options.
- **Font size:** Change the size of the fonts used on the screen.
- **Magnification gestures:** Control whether your phone recognizes gestures to pan, and zoom in or out.
- **Negative colors:** Reverse the display of on-screen colors from White text on a Black background to Black text on a White background.
- **Color adjustment:** Adjust the color of the screen if you are color blind or have difficulty reading the display because of the screen color. Touch **OFF/ON** to turn color adjustment on, then touch **Color adjustment** for options.
- **Accessibility shortcut:** Control whether your phone recognizes a gesture to quickly enable accessibility features. To use the gesture, press and hold the **Power/Lock Key** until you hear a sound or feel a vibration, then touch and hold two fingers on the screen until you hear an audio confirmation.

- **Text-to-speech options:** Configure options for converting text to speech. For more information, see [Text-to-speech Options](#).
- **Enhance web accessibility:** Choose whether to allow apps to install scripts from Google that make their Web content more accessible.
- **Sound Balance:** Control the signal sent to the left and right when using earphones.
- **Mono audio:** Enable stereo audio to be compressed into a single mono audio stream for use with a single earphone.
- **Turn off all sounds:** Mute every sound made by the phone during touches, selections, notifications, etc.
- **Flash notification:** Blink the Camera's flash for notifications.
- **Assistant menu:** Display a special menu to improve phone accessibility for users with reduced dexterity. Touch **OFF/ON**, then touch **Assistant menu** for options. For more information, see [Assistant Menu](#).
  - **Dominant hand:** Display the Assistant menu on the left or right side of the screen.
  - **Edit:** Reorder or remove items on the Assistant menu.
- **Interaction control:** Adjust how your phone interprets motions and screen touches. You can turn motions and screen timeout on or off. You can also block areas of the screen from touch interaction, turn Auto rotate and hard key functions (Power/Lock Key, Volume Key, etc.) off, and display app notifications only in the Notification panel and Status bar. Touch **OFF/ON** to enable the option.

## One-Handed Operation

Adapt your phone to be easier to use with only one hand.



1. Press  and touch  > **Settings** > **My Device** tab.
2. Touch **One-handed operation** for options:
  - **Keypad and in-call buttons:** Adjust the position of the dialing keypad and in-call buttons to the left or the right.
  - **Calculator:** Adjust the position of the calculator keypad to the left or the right.
  - **Unlock pattern:** Adjust the scale of the unlock pattern for use with one hand.
  - **Learn about one-handed operation:** View more information about one-handed operation.

# Language and Input Settings

Use Language and input settings to choose a default language for your device's operations, plus settings for text entry and other inputs.



## Choose a Default Language

Choose the language for operating your device.

1. Press  and touch  > **Settings** > **My Device** tab > **Language and input**.
2. Touch **Language** to select a language.

## Default Input Method




The following procedure allows you to select and set the default method to use when entering text.

1. Press  and touch  > **Settings** > **My Device** tab > **Language and input**.
2. Touch **Default** to select a text entry method.

**Note:** You can change the input method while you're entering text. Swipe your finger down from the status bar to display Notifications, and then touch **Select input method**.




## Google Voice Typing

Google voice typing allows you to speak your entries. When you enable Google voice typing, it's available for use when you touch a field to enter text.

1. Press  and touch  > **Settings** > **My Device** tab > **Language and input**.
2. Touch  beside **Google voice typing** to configure options:
  - **Choose input languages:** Select language(s) to use for voice input, or choose Automatic to let Google decide.
  - **Block offensive words:** Hide recognized offensive words.
  - **Download offline speech recognition:** Download and install speech recognition engines to allow you to use voice input while not connected to the network, such as during Airplane mode.

## Samsung Keyboard




The Samsung Keyboard is an on-screen QWERTY keyboard, so you can enter text by “typing” on the keyboard. Samsung keyboard is enabled by default, and you can choose options for using it.

1. Press  and touch  > **Settings** > **My Device** tab > **Language and input**.
2. Touch  next to **Samsung keyboard** to configure options:
  - **Alphabets:** Choose a keyboard configuration to be used when entering letters (Qwerty keyboard [default] or 3x4 keyboard).
  - **Numbers and symbols:** Choose a keyboard configuration to be used when you are entering numbers or symbols (Qwerty keyboard [default] or 3x4 keyboard).
  - **Input languages:** Choose language(s) for use with Samsung keyboard. When you have more than one language enabled, you can slide your finger on the space bar while entering text to switch languages.
  - **Predictive text:** Predictive text suggests words matching your text entries, and optionally, complete common words automatically. Touch the **OFF/ON** to turn Predictive text on, then touch **Predictive text** to configure options:
    - **Personalized data:** Use personal language data you have entered to make better predictions.
    - **Learn from Facebook:** Log into Facebook to learn your Facebook style.
    - **Learn from Gmail:** Log into Gmail to learn from your Gmail email.
    - **Learn from Twitter:** Log into Twitter to learn from your Twitter postings.
    - **Learn from Messaging:** Use your messages to make better predictions.
    - **Learn from Contacts:** Use your Contacts entries to make better predictions.
    - **Clear remote data:** Remove all anonymous data stored on the personalization server.
    - **Clear personal data:** Remove all personalized data you have entered.
  - **SwiftKey Flow:** Enter text by sliding your finger across the keys on the keyboard.
  - **Cursor control:** Move the cursor by sliding your finger across the keyboard.
  - **Key-tap vibration:** Set a vibration to occur when a key is touched.
  - **Key-tap sound:** Play a sound when a key is touched.

- **Handwriting:** Touch to configure options.
  - **Recognition type:** Choose the type of handwriting recognition, either **Stroke recognition** or **Complete recognition**.
  - **Recognition time:** Choose the length of time the keyboard waits to evaluate handwriting gestures.
  - **Pen thickness:** Choose the size of handwriting strokes on the screen.
  - **Pen color:** Choose the color of handwriting strokes on screen.
  - **About:** View information about Samsung keyboard handwriting.
- **Advanced:**
  - **Auto capitalization:** Automatically capitalize words in your text based on common usage, such as at the beginning of sentences.
  - **Auto spacing:** Insert spaces between words.
  - **Auto punctuate:** Automatically enter a period and space to end a sentence when you touch the space bar twice.
  - **Character preview:** Characters available on the key you touch display briefly as you enter text.
- **Help:** View information on using Samsung keyboard.
- **Reset settings:** Return settings to the defaults.

## Swype Settings



Swype is a new way to enter text on touch screens. Instead of touching each key individually, use your finger to trace over the letters of a word. For each word, place your finger on the first letter and glide to the subsequent letters, lifting on the last letter.

1. Press  and touch  > **Settings** > **My Device** tab > **Language and input**.
2. Touch  next to **Swype** to configure these options:
  - **Settings:** Set Swype options.
    - **Vibrate on keypress:** Vibrate the phone when a key is touched.
    - **Sound on keypress:** Play a sound when a key is touched.
    - **Pop-up on keypress:** Display characters above keys as you type.
    - **Show complete trace:** Displays the trace of each word until you start the next word.

- **Auto-capitalization:** Automatically capitalize the first word of sentences.
- **Auto-spacing:** Automatically insert spaces between words as you complete them.
- **Next word prediction:** Predict the next word based on the previous word.
- **Show Voice key:** Display a voice entry button on the keyboard.
- **My Words:** View and manage words in your Swype dictionary—used for word completion, suggestions, and spellchecking.
- **Languages:** Choose the current language for Swype and download new languages.
- **Gestures:** Learn about keyboard shortcuts you can use to quickly accomplish common tasks.
- **Help:** Get additional information about using Swype.
- **Updates:** Check for updates to Swype, and install them.

## Voice Search Settings




Performs Google searches by speaking the search terms.

1. Press  and touch  > **Settings** > **My Device** tab > **Language and input**.
2. Touch **Voice Search** for options:
  - **Language:** Choose a language for voice searching.
  - **Speech output:** Choose options for speech output.
  - **Block offensive words:** When enabled, words many people find offensive are not shown in results of Google voice searches. Offensive words are replaced in results with a placeholder (####).
  - **Hotword detection:** When enabled, you can say “Google” to launch voice search.
  - **Download offline speech recognition:** Download speech recognition, to enable voice input while offline.
  - **Personalized recognition:** Enable to have your device improve recognition based on your speech. (This option is only available if you are currently signed in to a Google account.)
  - **Google Account dashboard:** View and manage your collected data. (This option is only available if you are currently signed in to a Google account.)
  - **Bluetooth headset:** Records audio through a Bluetooth headset, when using an optional Bluetooth headset (not included), paired with your phone.





## Text-To-Speech Options

Text-to-speech (TTS) provides audible readout of text, for example, the contents of text messages and the Caller ID for incoming calls.

1. Press  and touch  > **Settings** > **My Device** tab > **Language and input**.
2. Touch **Text-to-speech options**:
  - **Preferred TTS engine**: Select **Samsung text-to-speech engine**, or **Google Text-to-speech Engine**. Touch  to configure options.
  - **Speech rate**: Choose a rate for text readouts.
  - **Listen to an example**: Play an example of speech used for readouts.



## Pointer Speed

This feature allows you to adjust the speed of the cursor.

1. Press  and touch  > **Settings** > **My Device** tab > **Language and input**.
2. Touch **Pointer speed** and use the slider to adjust the pointer speed.

## Motions and Gestures

The Motion settings allow you to set up various Motion activation services.

1. Press  and touch  > **Settings** > **My Device** tab.
2. Touch **Motions and gestures** to set options:
  - **Motion**: Control your phone with natural movements, like putting the phone to your ear to call a displayed contact. Touch **OFF/ON** to turn Motion on, then touch **Motion** to set options:
    - **Direct call**: Lift the phone to your ear while viewing a contact to call the contact.
    - **Smart alert**: Lift the phone to receive notifications of missed calls and notifications that occurred while the phone was stationary.
    - **Zoom**: Tilt the phone to zoom in or out when viewing pictures in Gallery.
    - **Move an icon**: Move the phone left or right while touching an icon to reposition it to another page.
    - **Browse an image**: Move the phone in a side-to-side motion to pan from side to side while viewing an image.
    - **Mute/pause**: Mute incoming calls and pause playback by turning the phone screen-side down.

- **Palm motion:** Control your phone by touching the screen with the palm of your hand. Touch **OFF/ON** to turn Palm motion on, then touch **Palm motion** to set options:
  - **Capture screen:** Create a screen capture by the swiping left to right (or right to left) across the screen with the side of your hand.
  - **Mute/pause:** Mute incoming calls and pause playback by covering the screen with your hand.
- **Gyroscope calibration:** Follow the prompts to calibrate your phone's motion sensors.

## Smart Screen

Use Smart screen options to have your phone automatically adjust screen timeout, rotation when it detects you are looking at the screen, and control scrolling and playback based on whether you are facing the screen.




Smart screen options use the front camera to detect when you are facing the screen. Some factors that may affect the ability of the front camera to detect your face are:

- When the phone is not docked or held upright, for example when placed on a table.
- When the front camera cannot detect your face and eyes.
- When the front camera is being used for the current application.
- When the source of light is behind you, or when using the phone in the dark.

## Smart Stay




Smart stay will prevent the screen from timing out as long as you are looking at it.

**Note:** When enabled, the Smart stay icon  displays in the Status bar.

1. Press  and touch  > **Settings** > **My Device** tab > **Smart Screen**.
2. Touch **Smart stay** to enable the option.
3. Touch  > **Help** for tips on using this feature.

## Air View



Use Air View to preview information such as email, speed dials, video elapsed time, and more by simply hovering your finger over the screen.

1. Preview information when you hover your finger over the screen. For example, you can hover your finger over a scheduled item in your calendar to see more details.
2. Press  and touch  > **Settings** > **My Device** tab.
3. Touch **OFF/ON** to enable Air view.
4. Touch **Air view** to set options:
  - **Information preview:** Display information previews, extended text, and enlarged images when you hover your finger over the screen.
  - **Progress preview:** Preview a scene or show elapsed time when you hover your finger over the progress bar while watching a video.
  - **Speed dial preview:** Display the contacts and their speed dial numbers when you hover your finger over them in your contacts list.
  - **Webpage magnifier:** Display magnified links on webpages when you hover your finger over them.
  - **Sound and haptic feedback:** Play a sound and feel vibration when you hover your finger over Air view items.
5. Touch  > **Air view help** for tips on using this feature.

## Voice Control

When Voice control is turned On, you can use voice commands to control your phone.

**Note:** If you set the alert type for calls or notifications to vibrate, voice command is not available.

1. Press  and touch  > **Settings** > **My Device** tab.
2. Touch **OFF/ON** to enable Voice control.
3. Touch **Voice control** to set options:
  - **Incoming calls:** Answer or reject calls with the voice commands “Answer” and “Reject”. When you answer a call with the voice command, the Speaker will automatically be turned on for hands-free talking.
  - **Alarm:** Stop or snooze alarms with the voice commands “Stop” and “Snooze.”



- **Camera:** Take pictures with the voice commands “Smile”, “Cheese”, “Capture” and “Shoot.”
- **Music:** Control the music player with the voice commands “Next”, “Previous”, “Pause”, “Play”, “Volume Up”, and “Volume Down.”

## Accounts Settings

When you set up accounts on your phone—such as your Google Accounts, Samsung Accounts, email—you can synchronize account information between your phone and the account. Types of information you can synchronize include contacts, pictures, videos, etc.



### Add an Account

Add an account to your device to share information between your device and the account.

1. Press  and touch  > **Settings** > **Accounts** tab > **Add account**.
2. Touch an account type, then follow the prompts to enter your account credentials and complete the account set up.



## Cloud

Back up your personal data using your Samsung Account, or use Dropbox to sync your phone's content.

1. Press  and touch  > **Settings** > **Accounts** tab > **Cloud**.
2. **Samsung Account:** Touch **Add account** and follow the prompts to create or sign into your Samsung Account to backup your personal data. (This option does not display if you are already signed in to your Samsung Account.)
3. **Dropbox:** If you have not signed in to you Dropbox account, touch **Link Dropbox account**. Follow the prompts to create or sign into your Dropbox Account to backup your personal data.

## Back Up and Reset Settings

Set up a backup account on your phone to save information from your phone to the account, and choose options for restoring data or resetting your phone to the factory defaults.

1. Press  and touch  > **Settings** > **Accounts** tab > **Back up and reset**.
2. Configure options:
  - **Back up my data:** Create a backup of your app data, Wi-Fi passwords, and other settings to Google servers.
  - **Backup account:** Choose a Google account for backups.



- **Automatic restore:** Restore information from your backup account when you reinstall an app.
- **Factory data reset:** Reset your phone settings to the factory defaults and delete all data on the phone.

## Location Services

Control apps' access to your location, and configure location sources. Some apps may require one or more location services be turned On for full app functionality. GPS signals may be affected by your surroundings, including:

- Buildings
- Tunnels or underground structures
- Weather conditions
- High-voltage or electromagnetic fields
- Tinted windows

### Set Location Services

1. Press  and touch  > **Settings** > **More** tab.
2. Touch **Location services** to set options:
  - **Access to my location:** Allow apps that have asked your permission to use your location information.
  - **Use GPS satellites:** Obtain location information from GPS satellites.
  - **Use wireless networks:** Obtain location information from Wi-Fi and/or wireless networks.
  - **My places:** Save your favorite locations for use with services that require location information.

## Security Settings

Configure your phone's security parameters.

## Encryption



After encryption, you must enter the PIN or password you set each time you turn on your device. You can also encrypt information stored on an optional installed memory card (not included).

Encryption may take an hour or more to complete. Do not turn off the device during encryption. Interrupting the encryption process may result in the loss of some or all data.

### Before Encrypting Your Device

**Important!** Charge the battery to at least 80%, and plug the device into the charger to ensure that the battery remains charged.

**Note:** Set a Screen lock password of at least 6 characters, including at least one number.

1. Press  and touch  > **Settings** > **More** tab.
2. Touch **Security** to set options:
  - **Encrypt device:** Encrypt data stored in your device's internal memory.
  - **Encrypt external SD card:** Encrypt files stored on an optional memory card (not included). You can choose whether to encrypt only new files, or to encrypt all files on the card. You can also choose to exclude multimedia files from encryption.

## Make Passwords Visible

Set password characters to briefly display as you enter them.

1. Press  and touch  > **Settings** > **More** tab > **Security**.
2. Touch **Make passwords visible** to enable the option.



## Device Administration

Some applications, such as Corporate email, may require you to allow access to your device by device administrators in certain circumstances, such as if your device is lost or stolen.

These applications enforce remote or local device security policies. Some of the features a device administration application might control are:

- Setting the number of failed password attempts before the device is restored to factory settings.
- Automatically locking the device.
- Restoring factory settings on the device.

## Device Administrators

1. Press  and touch  > **Settings** > **More** tab > **Security**.
2. Touch **Device administrators** and then perform these steps:
  - Touch an account.
  - Review the device administration details for the account.
  - To remove administration from the account, touch **Deactivate**.



## Unknown Sources

By default, you can only install apps from the Google Play Store. When Unknown sources is enabled, you can install apps from other sources.

1. Press  and touch  > **Settings** > **More** tab > **Security**.
2. Touch **Unknown sources** to enable the option.



## Verify Apps

Require apps to be examined before they are installed for any potential harm they might pose to your device.

1. Press  and touch  > **Settings** > **More** tab > **Security**.
2. Touch **Verify apps** to enable the option.

## *Credential Storage*



You can install credentials from an optional installed memory card (not included), and use the Credential storage settings to allow applications to access the security certificates and other credentials.

1. Press  and touch  > **Settings** > **More** tab > **Security**.
2. Touch an option:
  - **Trusted credentials:** Display a list of credentials you've installed.
  - **Install from device storage:** Install encrypted certificates from an optional installed memory card (not included).
  - **Clear credentials:** Remove stored credentials and reset the password (only available when credentials are installed).

## Application Manager



You can download and install applications from the Google Play Store or Samsung Apps, or create applications using the Android SDK and install them on your phone. Use Application manager to manage applications on your phone.

**Warning!** Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

1. Press  and touch  > **Settings** > **More** tab > **Application manager**.
2. Swipe left to display the **DOWNLOADED**, **ON SD CARD**, **RUNNING**, or **ALL** tabs to view the status of apps and services. Touch an app or service for information, and for app options such as stopping and uninstalling.



## Battery

See what's using battery power.

1. Press  and touch  > **Settings** > **More** tab.
2. Touch **Battery** to view battery usage for apps and services. Touch an item for more information, or to configure options for managing power use.

## Storage



Manage the use of memory resources in your phone's Device memory, and on an optional installed memory card (not included).

1. Press  and touch  > **Settings** > **More** tab.
2. Touch **Storage** to view information about memory usage, and to set options:
  - **Device memory:** View memory usage for the different types of information stored on your phone's memory. Touch an item for more information.
  - **SD card:** View memory usage for the different types of information stored on an optional installed memory card. For more information on memory cards, see [Memory Card](#).
    - **Mount SD card:** Prepare the card for use as storage in the phone. This option is only available if an optional memory card is installed, and is not already mounted. Usually, your phone mounts a memory card as soon as you install it.
    - **Unmount SD card:** Prepare an installed optional memory card for safe removal or formatting.
    - **Format SD card:** Permanently remove all content from an optional installed memory card. After formatting, the content cannot be retrieved.





## Date and Time

By default, your phone receives date and time information from the wireless network. When you are outside network coverage, you may want to set date and time information manually using the Date and time settings.

1. Press  and touch  > **Settings** > **More** tab.
2. Touch **Date and time** to configure settings:
  - **Automatic date and time:** When enabled, the device takes date and time updates from the wireless network.
  - **Set date:** Enter the current date (only available when Automatic date and time is disabled).
  - **Set time:** Enter the current time (only available when the Automatic setting is disabled).
  - **Automatic time zone:** When enabled, the device takes the time zone from the wireless network.
  - **Select time zone:** Choose your local time zone (only available when the Automatic setting is disabled).
  - **Use 24-hour format:** Set the format for time displays.
  - **Select date format:** Set the format for date displays.



## Activate This Device

Connect to the network and activate your phone. If your phone is already activated, use this option to view information about your plan and usage.

1. Press  and touch  > **Settings** > **More** tab.
2. Touch **Activate this device** and follow the prompts to activate your phone on the network.

## System Update



Use System update options to update your phone's internal software.

1. Press  and touch  > **Settings** > **More** tab.
2. Touch **System Update** to use these options:
  - **Update:** Check for updates.
  - **Auto update:** Check for updates automatically.

- **Wi-Fi only:** Download updates only when connected via Wi-Fi.
- **Update PRL:** Download and the latest Preferred Roaming List (PRL), used by your phone to access the network.
- **Update Profile:** Update the user profile related to your wireless service account. If you choose to change your user name online, use this option to update the user name on your phone.
- **UICC Unlock:** Unlock your device's Universal Integrated Circuit Card.

## About Device

View information about your phone, including status, legal information, hardware and software versions, etc.

1. Press  and touch  > **Settings** > **More** tab.
2. Touch **About device**, and then touch items for more details:
  - **Software version:** View your phone's software version.
  - **Hardware version:** View the hardware version of your device.
  - **Status:** View information about your device's current status.
  - **Legal information:** Display open source licenses, configure license settings, including your DivX® VOD registration, and Google info.
  - **Device name:** View your device's name, and enter a new name if desired.
  - **Model number:** View your device's model number.
  - **Android version:** View the firmware version of your device.
  - **Baseband version:** View the baseband version of your device.
  - **Kernel version:** View the kernel version of your device.
  - **Build number:** View the build number of your device.
  - **SELinux status:** View your device's current status.
  - **Secure boot status:** View your device's secure boot status.

## *Copyright Information*

---

©2013 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are trademarks of their respective owners.

©2013 Samsung. Samsung, Galaxy S, and S Beam are trademarks of Samsung Electronics Co., Ltd.

©2013 Google Inc. All rights reserved. Google, the Google logo, Android, Chrome, Gmail, Google+, Google Books, Google Maps, Google Mobile Services, Google Play, Google Voice, Google Voice Search, Google Wallet, Hangouts, YouTube, and Picasa are trademarks of Google, Inc.

Other marks are property of their respective owners.

Screen images simulated.

Appearance of device may vary.

# Index

---

- 3-way Calling, 59
- 4G Services, 90
- About Device, 153
- Accessibility Settings, 137
- Account Passwords, 18
- Accounts, 69
  - Email, 71
  - Gmail, 69
  - Google, 69
  - Social Network, 78
- Accounts and Sync, 147
- Activate This Device Setting, 152
- Activation, 15
- Air View, 41
- Airplane Mode, 118
- Alarm, 111
- Alarm and Timer, 111
- Android Beam, 120
- Answer a Call, 53
- App Shortcut, 30
- Application Manager, 151
- Apps, 81
- Assistant Menu, 41
- Backup and Reset, 147
- Battery
  - Settings, 151
- Blocking Mode, 135
- Bluetooth, 93
  - Connect to a Car Kit, 93
  - Settings, 116
  - Turn On or Off, 93
  - Unpair, 94
- Browser, 89
- Calculator, 109
- Calendar, 109
- Call Forwarding, 60
- Call Logs, 62
  - Clear, 63
  - Make call from, 51
  - Options, 62
  - View, 62
- Call Waiting, 58
- Caller ID, 58
- Camera, 100
  - Settings, 103
  - Viewing Pictures, 104
- Clock, 111
- Clock (App), 111
- Commercial Mobile Alert System (CMAS), 78
- Conference Calling, 59
- Contacts, 64
  - Accessing Contacts, 64
  - Add, 64
  - Adding Entries to Your Favorites, 66
  - Edit, 65
  - Link, 66
  - Make call from, 52
  - Share, 67
- Contacts Groups, 67
  - Adding Contacts, 67
  - Creating a New Group, 67
  - Sending a Message to a Group, 68
- Corporate Email
  - Creation, 71
- Data Services, 89
  - Password, 19
- Data Usage, 117
- Date and Time Settings, 152
- Display Settings, 124
- Downloads, 111
- Drag, 25
- Dropbox, 112
- DTMF Tones, 134
- Email, 71
  - Compose, 72
  - Microsoft Exchange Accounts, 71
- Email Message
  - Make call from, 52
- Emergency Alerts, 78
  - Commercial Mobile Alert System (CMAS), 78

- Emergency Numbers, 53
- Enhanced 911 (E911), 53
- Enter Text, 45
- Extended Home Screen, 31
- Files
  - Transfer to/from Computer, 98
- Flick, 26
- Flipboard, 78
- Folder, 30
- Gestures, 24
- Google
  - Google+, 79
  - Hangouts, 79
  - Local, 86
  - Maps, 86
  - Messenger, 79
  - Navigation, 86
  - Play Books, 82
  - Play Magazines, 82
  - Play Movies &TV, 83
  - Play Music, 84
  - Search, 112
  - Settings, 112
  - Voice Typing, 45
- Google Play Store, 81
  - Install an App, 81
  - Wallet Account, 82
- Google Voice Typing, 140
  - Configuring, 46
  - Using, 46
- Google+, 79
- Hangouts, 79
- Hearing Aids, 134
- Help, 112
- Home Page
  - Add, 30
- Home Screen, 29
  - Add Items, 30
  - Customize, 30
  - Extended, 31
  - Move or remove items, 30
  - Wallpapers, 32
- Home Screen Mode, 130
- Hotspot, 116
- In-call Options, 57
- Incoming Call
  - Answer, 53
  - Reject, 54
- International Dialing, 134
- Keyboard, 141, 142
  - Samsung, 141, 142
  - Touchscreen, 45
- Kies via Wi-Fi, 98, 121
- Language and Input, 140
- LED Indicator, 127
- Local, 86
- Location Services, 148
- Logs, 62
- Maps, 86
- Memory Card
  - Remove, 97
- Memory Card
  - Insert, 96
- Messaging
  - Managing Messages, 75
- Messaging, 69, 74
  - New Message Notification, 75
  - Sending Messages, 74
- Messaging
  - Settings, 76
- Messenger, 79
- microSD Card, 96
- MMS Messaging, 74
- Mobile Networks, 118
- Motion
  - Settings, 144
- Motions and Gestures, 43
  - Enabling, 44
- Music
  - Google Play Music, 84
  - Music (App), 84
- Music (App), 84
- My Files, 112
- Navigation
  - Local, 86
  - Maps, 86
  - Navigation, 86
- Near Field Communication (NFC), 119

- Nearby Devices, 120
- Notification Icons, 40
- Notification Panel, 33, 124
- Notifications
  - Sound Settings, 129
- Phone
  - About Device, 153
  - Dialer, 51
  - External features and buttons, 11
  - Layout, 21
  - Navigation, 24
- Phone Call
  - Settings, 131
- Phone Calls, 51
  - Call Alerts, 132
  - Emergency numbers, 53
  - From email messages, 52
  - From text messages, 52
  - Make calls, 51
  - Receive, 53
  - Rejection Messages, 131
  - Speed Dialing, 61
  - Using Call Logs, 51
  - Using contacts, 52
  - Using phone keypad, 51
  - Using speed dial, 52
- Pinch, 28
- Play Books, 82
- Play Magazines, 82
- Play Movies & TV, 83
- Play Music, 84
- Pointer Speed, 144
- Power Off, 23
- Power On, 23
- Quick Settings, 34
- Reject Incoming Call, 54
- Rejection Messages, 131
- Roaming, 119
- Rotate, 27
- S Beam, 120
- S Memo, 112
- S Translator, 113
- S Voice, 113
- Samsung Apps, 113
- Samsung Keyboard, 141, 142
- Screen Mirroring, 121
- Screen Mode, 125
- SD Card, 96
  - Format, 98
  - Unmount, 98
  - View Available Memory, 98
- Search (Google), 112
- Security
  - Screen Lock, 121
  - Settings, 148
- Settings, 114
  - Accessibility, 137
  - Accounts and Sync, 147
  - Backup and Reset, 147
  - Bluetooth, 116
  - Data Usage, 117
  - Display, 124
  - Dock, 137
  - Language and Input, 140
  - Power Saving, 136
  - Wallpaper, 124
  - Wi-Fi, 115
- Setup Screens, 16
- Slide, 25
- Smart Screen, 44, 145
- Smart Stay, 145
- SMS Messaging, 74
- Social Network Accounts, 78
- Speed Dialing, 61
- Spread, 28
- Sprint 411, 20
- Sprint Account
  - Management, 19
- Sprint Operator Services, 20
- Status Bar, 39
- Status Icons, 39
- Stopwatch, 111
- Storage
  - Settings, 151
- Story Album, 87
- Swipe, 25
- System Update, 152
- Tethering, 118

- Text Entry, 45
- Text Input
  - Methods, 45
- Text Message
  - Make call from, 52
- Text Messaging, 74
- Text-To-Speech, 144
- Timer, 111
- Tools, 109
- Touch, 24
- Touch and Hold, 24
- Touchscreen
  - Keyboard, 45
  - Turn off, 23
  - Turn on, 23
- TripAdvisor, 88
- TTY Mode, 134
- Turn Device Off, 23
- Turn Device On, 23
- Typing, 45
- US Dialing, 134
- Vibrations
  - Settings, 129
- Video
  - Record, 101
- Video Player, 108
- Videos
  - Sharing, 108
- Visual Voicemail, 56
- Voice Control, 45
  - Settings, 146
- Voice Search
  - Settings, 143
- Voice Typing, 45
  - Configuring, 46
  - Using, 46
- Voicemail, 54
  - Notification, 54
  - Password, 18
  - Retrieve messages, 55
  - Set up, 54
  - Setup, 18
- Volume
  - Ringtones, 128
- Volume
  - Settings, 128
- VPN, 95, 119
- Wallpaper
  - Settings, 124
- Wallpapers, 32
- WatchON, 88
- Web, 89
- Widget, 30
- Wi-Fi, 91
  - Settings, 115
- World Clock, 111
- YouTube, 80
- Zoom, 28